



Wood

focus[®]

CREATE BEYOND CONVENTION

EMIFOCUS

Installation and User Manual

Tested by OMNI-Test Laboratories, Inc. and approved in accordance with:

UL 737-2011 and ULC S627-23

US EPA EXEMPT

Report number : 0304WF008S

This document was provided with your Focus fireplace.

PLEASE READ AND RETAIN THIS MANUAL



CONTENTS

INTRODUCTION	04
SPECIFICATIONS	05
■ DETAILED PLAN.....	05
■ ROOF OUTLET REQUIREMENTS.....	06
■ CHIMNEY REQUIREMENTS.....	06
■ SUPPORTING STRUCTURE RULES.....	06
■ CONNECTORS.....	07
■ FRESH AIR INLET DEVICE.....	07
■ FLOOR CLEARANCE REQUIREMENTS.....	08
■ WALL CLEARANCE REQUIREMENTS.....	09
■ MATERIALS, PARTS, AND TOOLS INCLUDED FOR INSTALLATION.....	10
INSTALLATION	11
■ FIREPLACE INSTALLATION.....	11
USE	15
■ HANDLING FLAMMABLE PRODUCTS.....	15
■ GRATE.....	15
■ ASHES.....	15
■ FUEL.....	15
■ SPARK GUARD.....	16
■ BEFORE YOUR FIRST FIRE.....	17
■ LIGHTING AND MAINTAINING YOUR FIRE.....	17
■ PROTECTIVE GLOVES.....	18
■ OPERATING AND USING THE DAMPER.....	18
■ OPERATING AND USING THE FRESH AIR INTAKE.....	18
MAINTENANCE	19
■ ASH REMOVAL.....	19
■ CREOSOTE FORMATION.....	19
■ CHIMNEY SWEEPING.....	19
■ SURFACE CLEANING.....	20
■ SPARE PARTS.....	20
WARRANTY	20
APPENDIX	21
■ GAS ADAPTATION.....	21

INTRODUCTION

Please read this entire manual before proceeding with installation and use. Failure to follow the instructions in this manual may result in serious property damage and bodily injury, including fatal injury. Be sure to contact local authorities for additional information on regulations in your area. Failure to comply with this manual will automatically void the Focus warranty.

Consult with competent authorities (e.g., municipal building services, fire departments, fire prevention offices) before installation to determine if a permit is required.

NOTE :

This fireplace has been certified for use with wood or with a gas burner compliant with ANSI Z21.60 standard, with a heat output of 65,000 BTU/Hr or less.

All **WARNINGS** and **SAFETY RULES** will appear in highlighted boxes.

Keep this manual in an accessible location for future reference.

Thank you for choosing a Focus fireplace.

Manufactured by:
atelier dominique imbert s.a.s.
34380-Violis le fort-France
www.focus-creation.com

tested to USA: UL737-2011
CANADA: ULC S627-23

**CAUTION: HOT WHILE IN OPERATION
DO NOT TOUCH. KEEP CHILDREN AND
CLOTHING AWAY. CONTACT MAY
CAUSE SKIN BURNS. SEE NAMEPLATE AND
INSTRUCTIONS. KEEP FURNISHINGS AND OTHER
COMBUSTIBLE MATERIALS A CONSIDERABLE
DISTANCE AWAY FROM THIS APPLIANCE.**

Report Number: 8304WF088


LISTED SOLID FUEL FIREPLACE SERIAL NO.
STOVE / MODEL: EMIFOCUS

DATE OF MANUFACTURE:

01	02	03	04	05	06	07	08	09	10	11	12	2005	2006	2007	2008	2009
----	----	----	----	----	----	----	----	----	----	----	----	------	------	------	------	------




CLEARANCE TO COMBUSTIBLE SURFACES

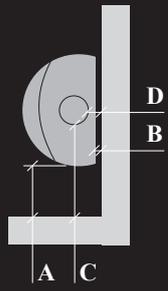

A: UNIT TO SIDEWALL: 26"
B: UNIT TO BACKWALL: 1/2"
C: CHIMNEY CONNECTOR TO SIDEWALL: 36"
D: CHIMNEY CONNECTOR TO BACKWALL: 2"

CAUTION: backwall must be 1/2" cement board fixed on metal studs, 4' wide with the appliance mounted in the center. 1" of rockwool insulation (Roxul) is attached to backside of 4' cement board.

THERMAL FLOOR PROTECTION

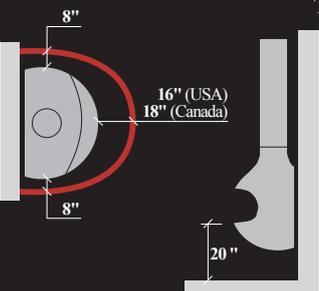

Floor protection must be made of non-combustible material or equivalent (R value of 0.6 or greater) extending beneath heater and to front / sides / rear as indicated on the diagram.

In the USA: 8" to either side of the fireplace opening and 16" to the front of the fireplace opening.
* In Canada 8" to the sides and back of the fireplace and 18" to the front of the fireplace.

Minimum under ceiling height: 8' - 6".

PREVENT HOUSE FIRES:
Install and use only in accordance with manufacturer's installation and operation instructions and local codes. In absence of any local codes, installation must meet minimum requirements of NFPA 221 in USA, in Canada CSA B365. Refer to manufacturer's instructions and local codes for precautions required for passing chimney system through a combustibile wall or ceiling. Inspect and clean chimney system frequently in accordance with manufacturer's instructions. Do not connect this unit to a chimney serving another appliance. For use with solid wood fuel only. **OPERATE ONLY WITH SCREEN IN PLACE.** Must use flue connector, anchor plate and connection pieces provided by Focus for installation, refer to owners manual for installation instructions. Chimney must be factory built UL 103HT or masonry. Inspect and clean chimney frequently. Under certain conditions of use, creosote build-up may occur rapidly. Contact local building or fire officials about restrictions and installation inspection in your area.
DO NOT OVERFIRE - IF UNIT OR CHIMNEY CONNETOR GLOWS, YOU ARE OVERFIRING.

Exempt from EPA Certification under 40CFR60.531

SPECIFICATIONS


⚠ WARNING :

DO NOT INSTALL IN ANY FIREPLACE. DO NOT INSTALL OUTDOORS.

DO NOT CONNECT OR USE IN CONJUNCTION WITH AIR DISTRIBUTION DUCTS UNLESS THEY ARE SPECIFICALLY APPROVED FOR THIS INSTALLATION.

DO NOT INSTALL IN A TRANSPORTABLE BUILDING.

■ DETAILED PLAN

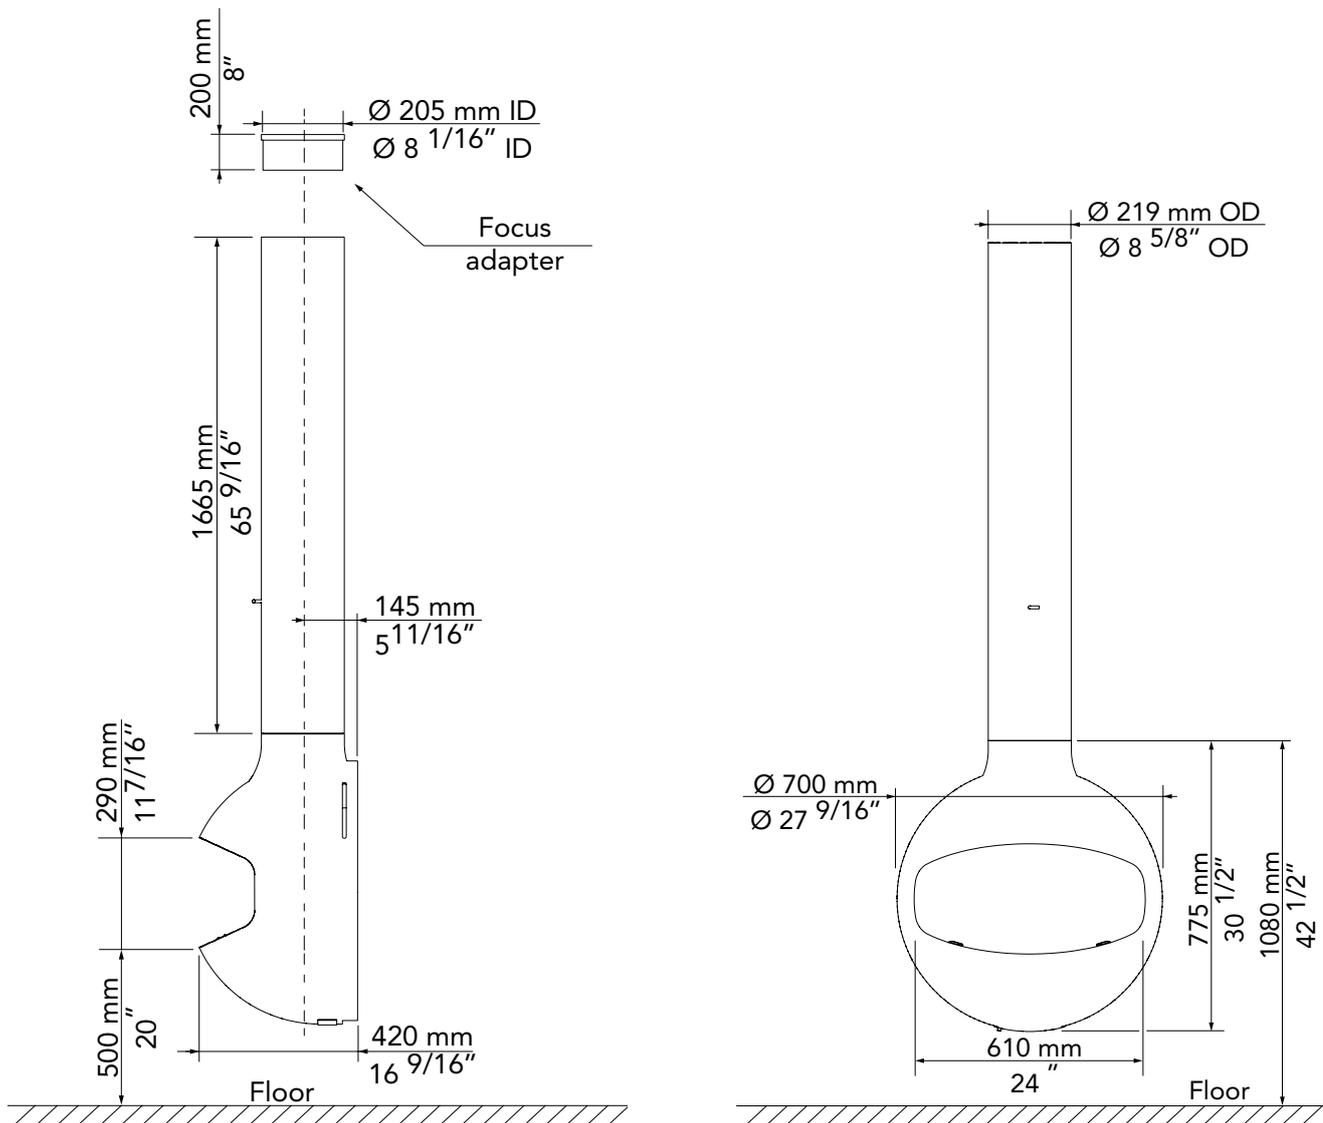


Hearth weight : 65 kg (143 lbs)

Steel flue weight : 16 kg/meter (10,6 lbs/foot)

SPECIFICATIONS

■ ROOF OUTLET REQUIREMENTS

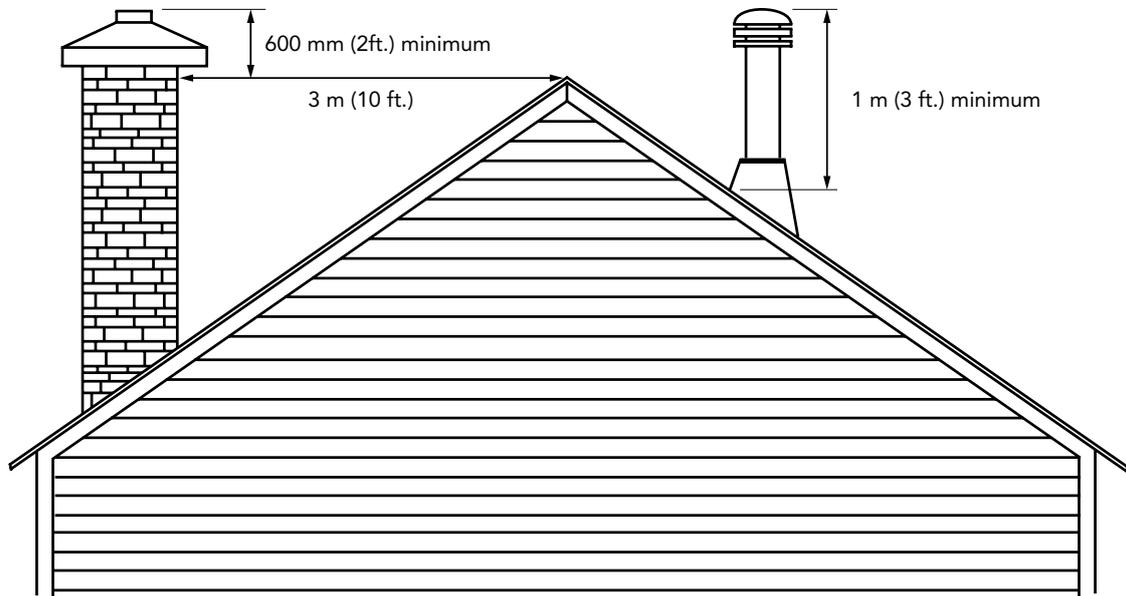

■ CHIMNEY REQUIREMENTS

⚠ WARNING :

DO NOT CONNECT THIS UNIT TO A CHIMNEY FLUE SERVING ANOTHER APPLIANCE.

The total length of the flue (interior + exterior) must be at least 3000 mm (10').

If the fireplace is installed less than 5 km (3 miles) from the ocean or with a 30° elbow or more, the total length must be at least 4000 mm (13').

The appliance must be connected to a flue that meets the specifications for HT-type chimneys, as described in the UL 103 / ULC S629 standard.

■ SUPPORTING STRUCTURE RULES

⚠ WARNING :

THE PLATE SUPPORT (WALL) MUST BE SIZED TO ACCOMMODATE BOTH THE STATIC AND DYNAMIC LOADS OF THE FIREPLACE. IT IS YOUR RESPONSIBILITY TO CONSULT AN ENGINEER OR ARCHITECT TO PERFORM THESE CALCULATIONS.

SPECIFICATIONS

■ CONNECTORS

All connectors, including the Focus steel flue, the Focus universal adapter (200 mm / 8"), and the finishing collar provided by the chimney manufacturer with a single-wall connection, are categorized as non-insulated chimney components.

To avoid thermal traps, it is essential that the chimney connector does not pass through an attic, roof space, closet, or any concealed area that could act as a heat trap, including floors or ceilings.

In cases where passing through an attic, roof framing, floor, or ceiling is unavoidable, it must be done using an insulated chimney.


Furthermore, strict adherence to the "safety distances from combustible materials" outlined on page 8 is essential.

WARNING :

PASSING THROUGH A WALL OR COMBUSTIBLE CONSTRUCTION IS NOT SUITABLE FOR THIS FIREPLACE.

■ FRESH AIR INLET DEVICE

For optimal performance, Focus recommends installing a fresh air intake in the room, ideally positioned beneath the fireplace. We suggest using the **Deflect-O A0684 semi-rigid aluminum duct**. The minimum size for the fresh air inlet is:

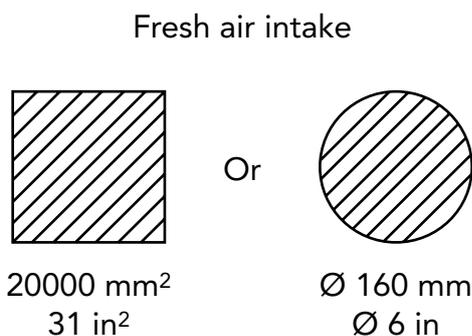


WARNING :

THIS FRESH AIR INLET DEVICE IS MANDATORY WHEN USING MECHANICAL VENTILATION SYSTEMS SUCH AS KITCHEN HOODS, PERMANENT AIR EXTRACTORS, OR ANY OTHER AIR CONDITIONING SYSTEM THAT CREATES A VACUUM IN THE HOME.

SPECIFICATIONS

■ FLOOR CLEARANCE REQUIREMENTS

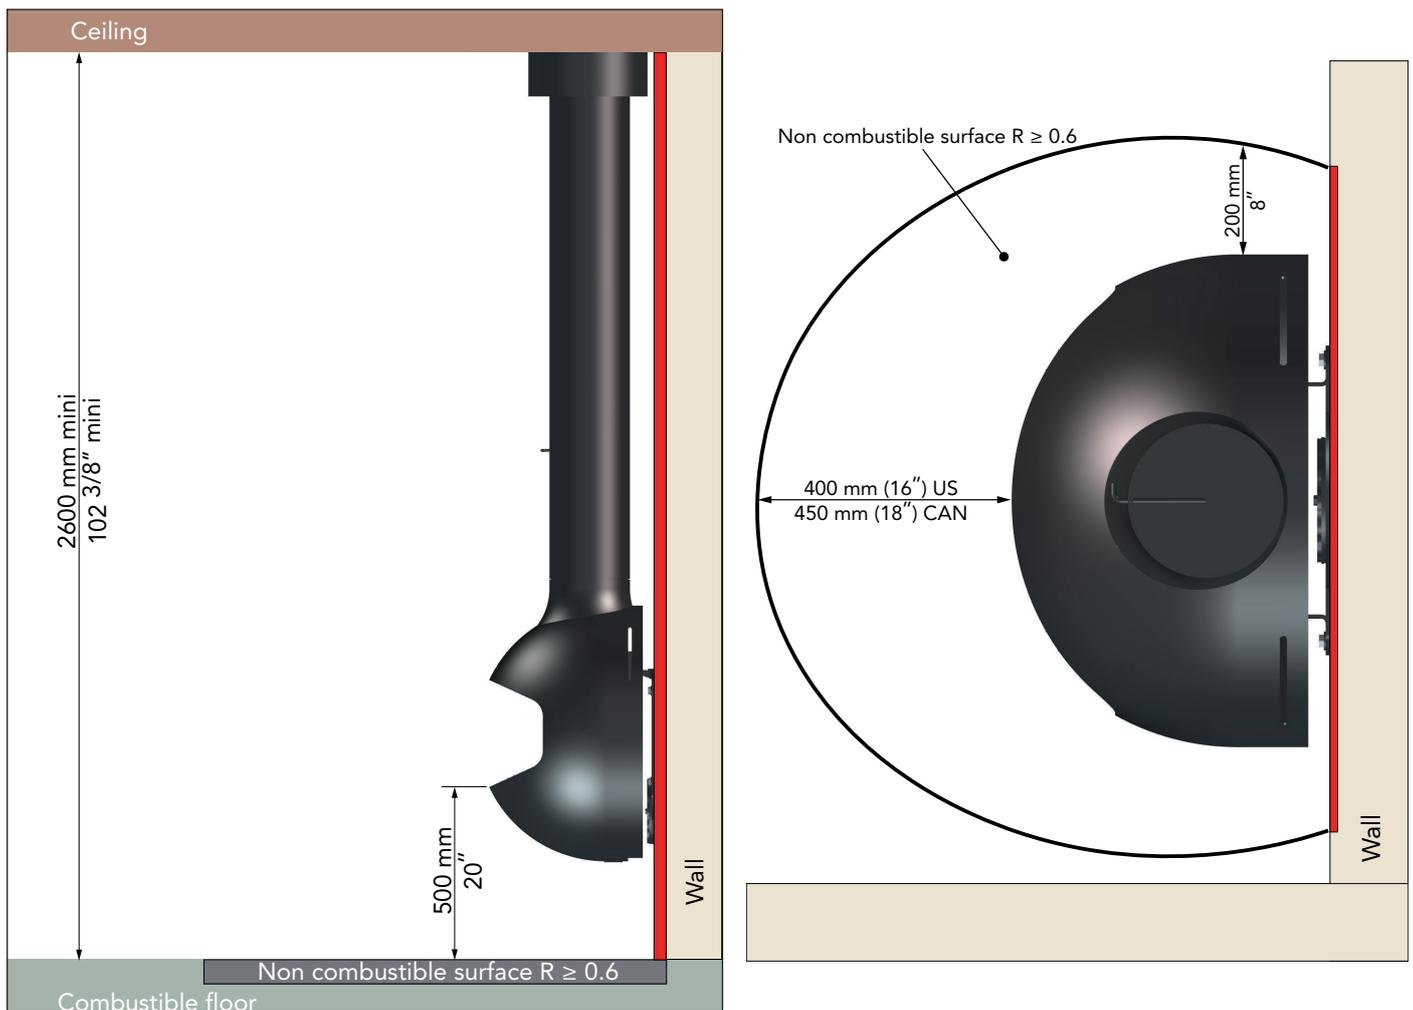

⚠ WARNING :


HEATED FLOORS ARE NOT PERMITTED.

SPECIFICATIONS

■ WALL CLEARANCE REQUIREMENTS

⚠ WARNING :

YOU MUST LEAVE A 12 MM (1/2") GAP BETWEEN YOUR FIREPLACE AND THE CEMENT BOARD.

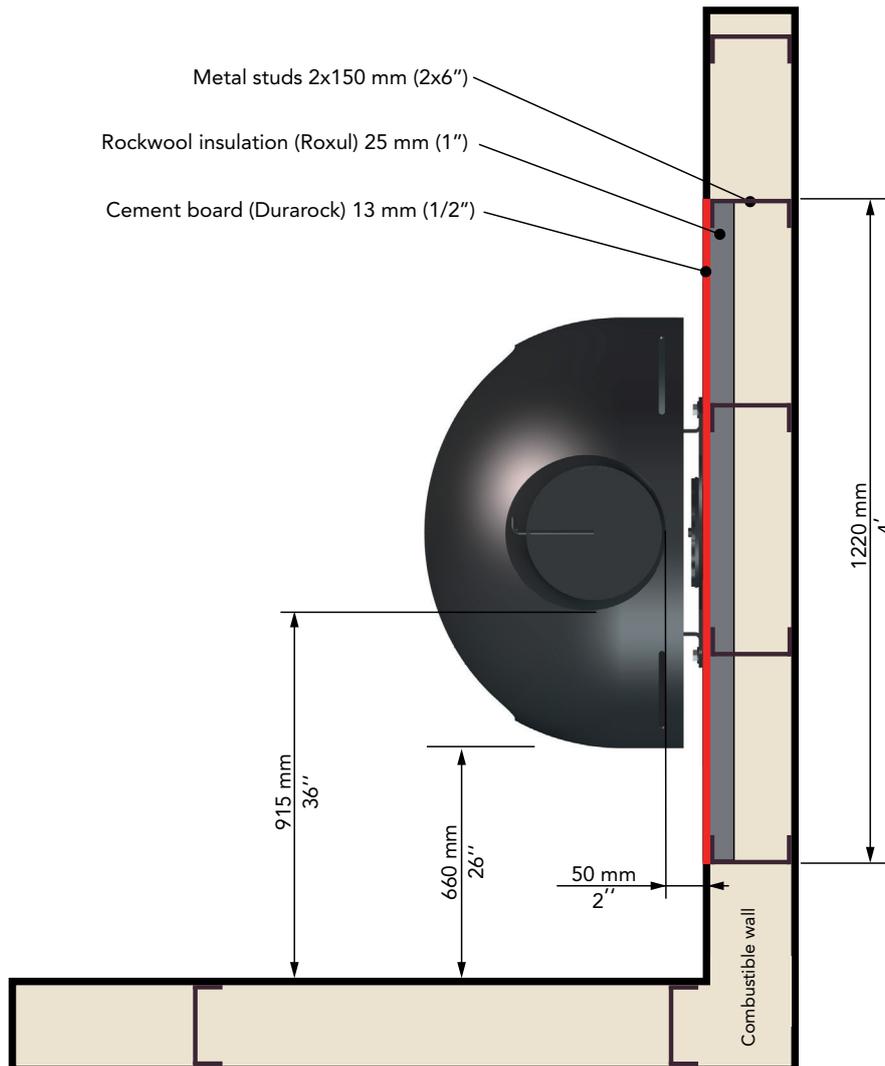

⚠ WARNING :

FIRE CLEARANCES MAY ONLY BE REDUCED WITH THE APPROVAL OF THE RELEVANT AUTHORITIES. DO NOT PLACE ANY COMBUSTIBLE MATERIAL IN FRONT OF THE FIREPLACE WITHIN 900 MM (36").

NOTE :

To prevent premature aging of your painted walls, use only mineral or acrylic paints. For other types of paint, the fire clearance distances mentioned above apply.

Fire clearance for a PVC window: refer to the window's technical specifications.

SPECIFICATIONS

■ MATERIALS, PARTS, AND TOOLS INCLUDED FOR INSTALLATION

Supplied with Delivery :

- The fireplace.
- Steel flue.
- The plate support.
- The grate.
- The spark guard.
- Focus kit (thermal protective glove, assembly gloves, touch-up spray paint, ash trap, the cold handle and this manual)
- Cover disc.

Optional :





- Steel flue extension.

Minimum Tools Required for Installation :

- Drill.
- Allen keys (M4).
- Screwdriver set.
- Open-end wrench (M12).
- Scaffolding (depending on ceiling height).
- A minimum of two people is required.



INSTALLATION

■ FIREPLACE INSTALLATION

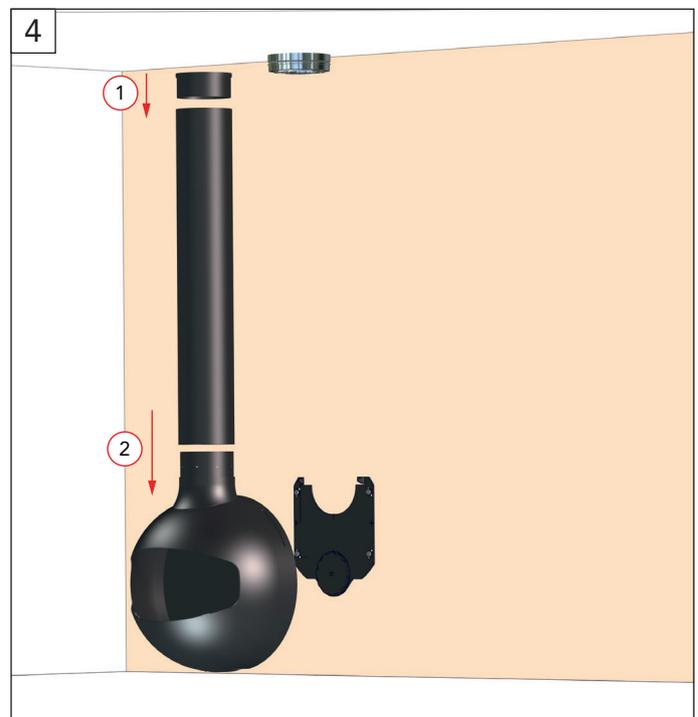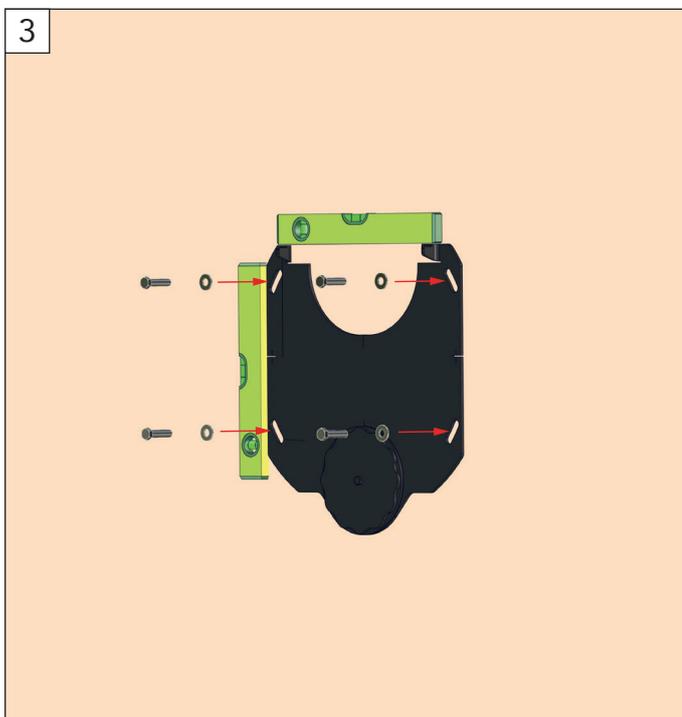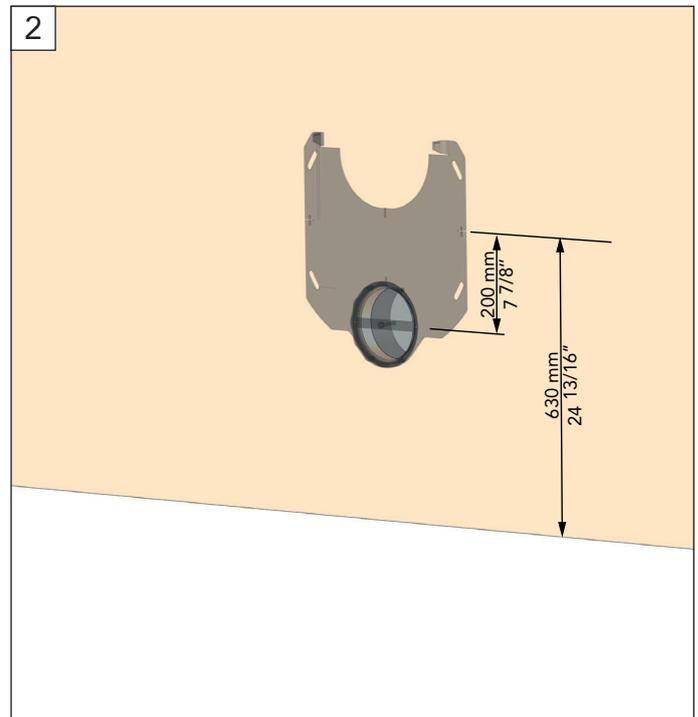
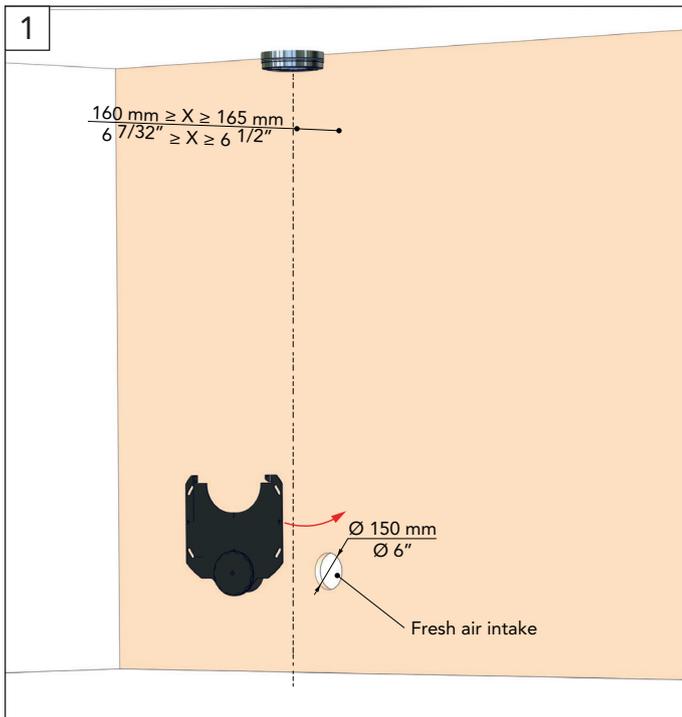


Put the 200 mm (8") Focus adapter to the end of the flue.



INSTALLATION

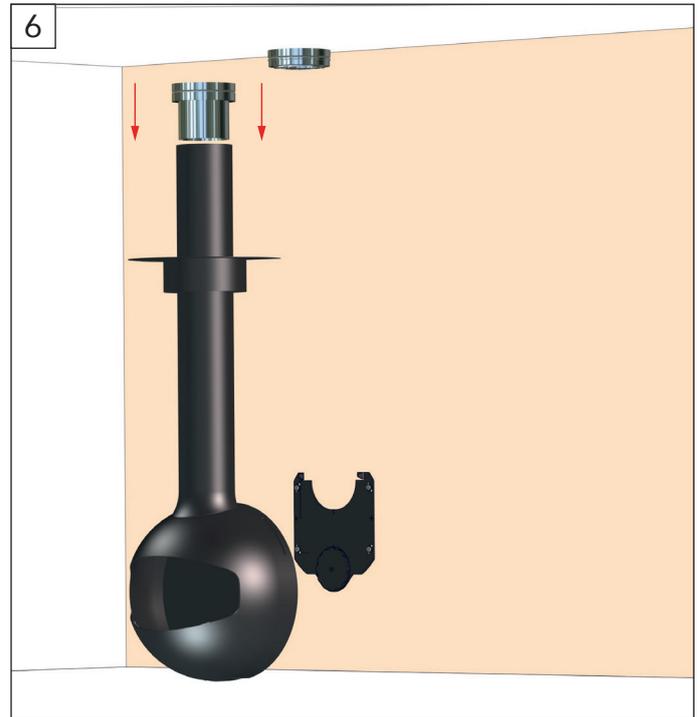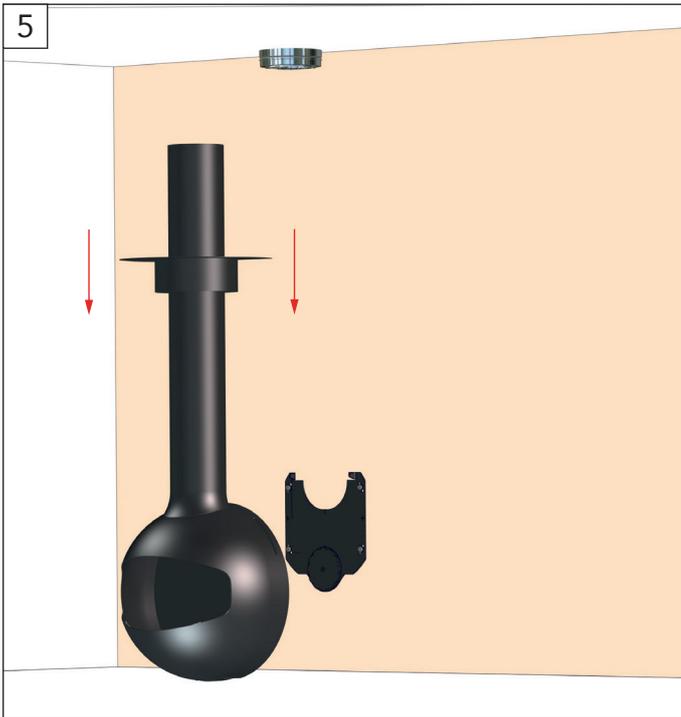



Insert the class A finishing collar with adapter into the Focus adapter.

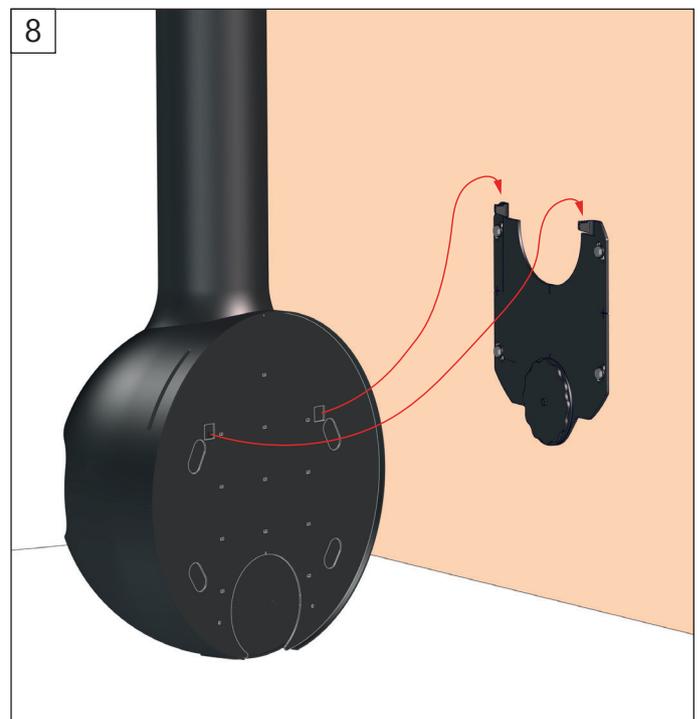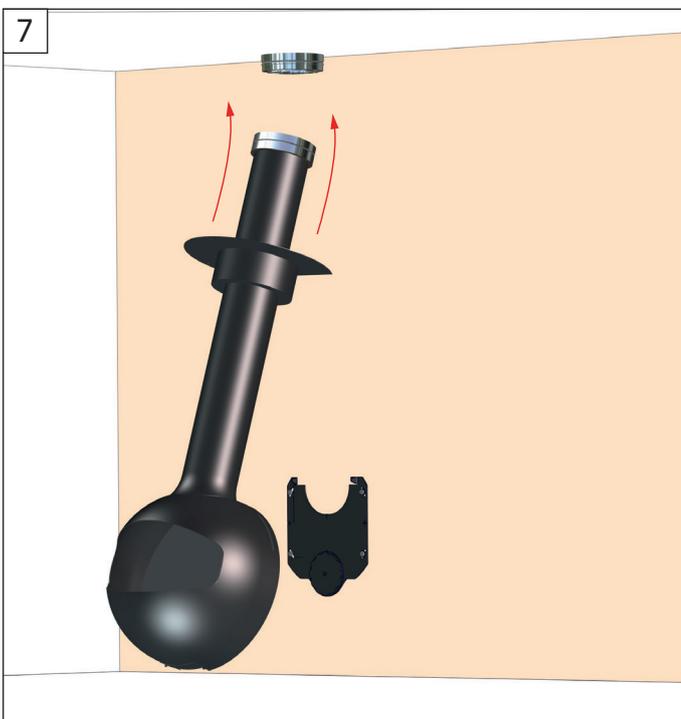

INSTALLATION

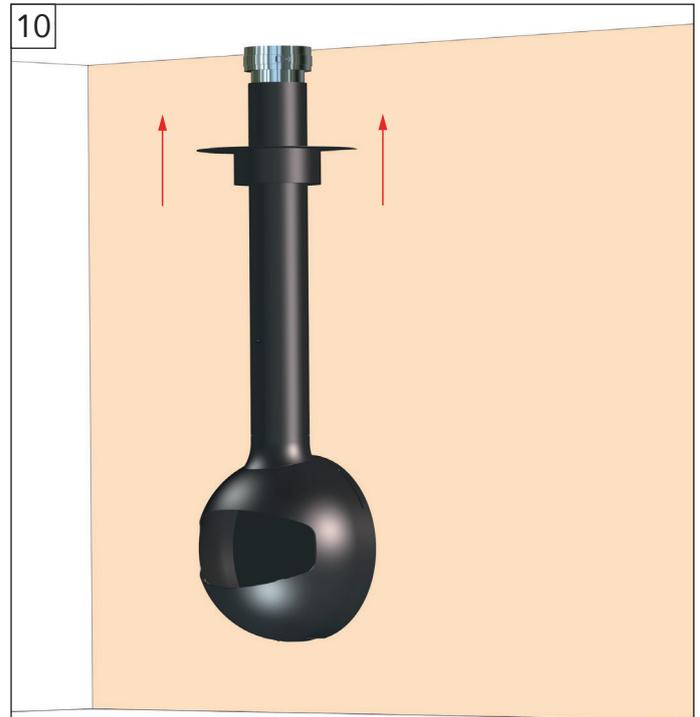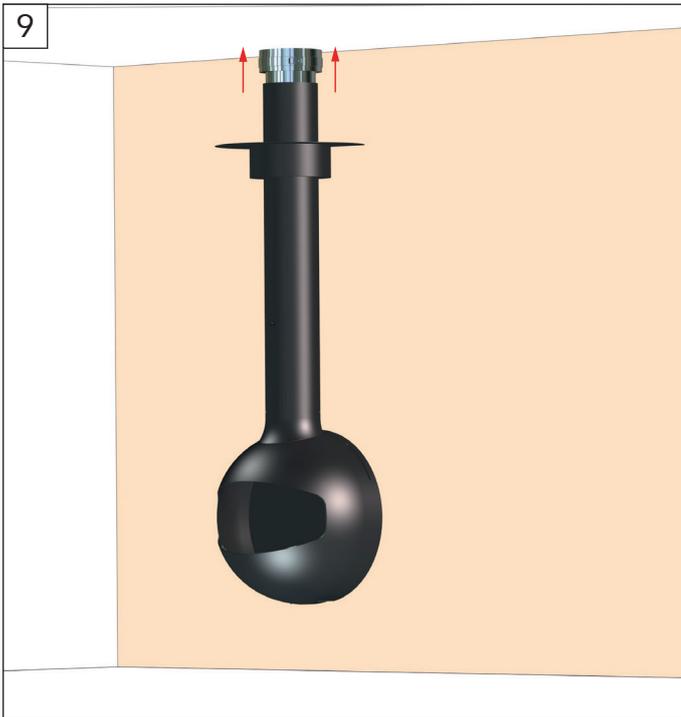


Position the conical reducer and secure it.

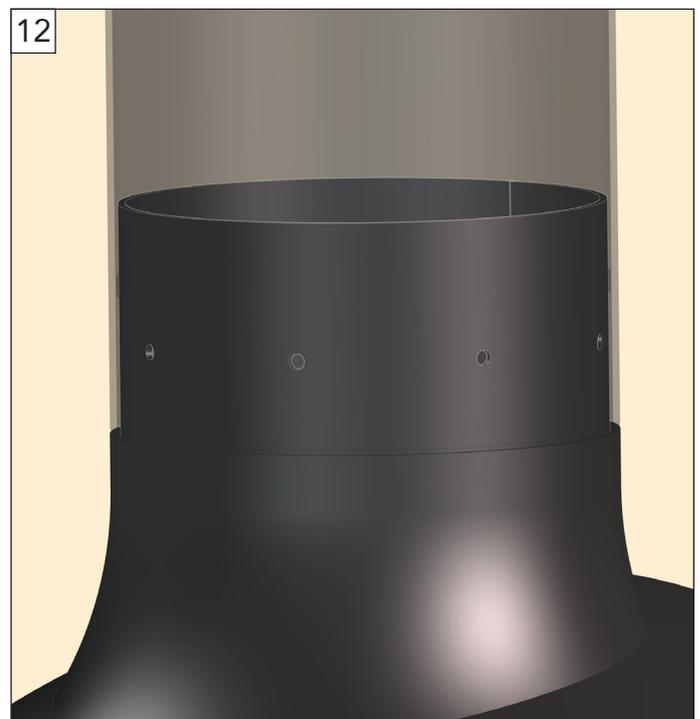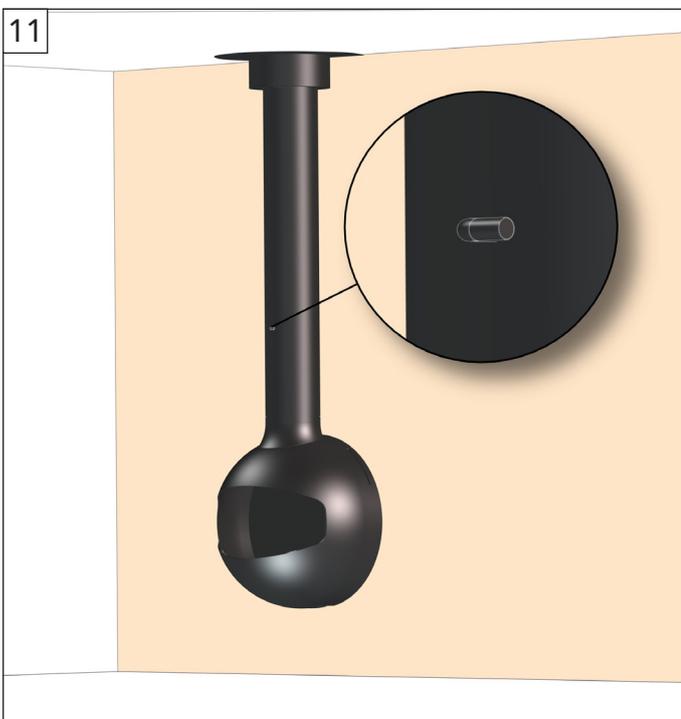

Center the duct using the 8 provided flat screws. To do this, go through the fireplace opening to access the expansion area.

INSTALLATION

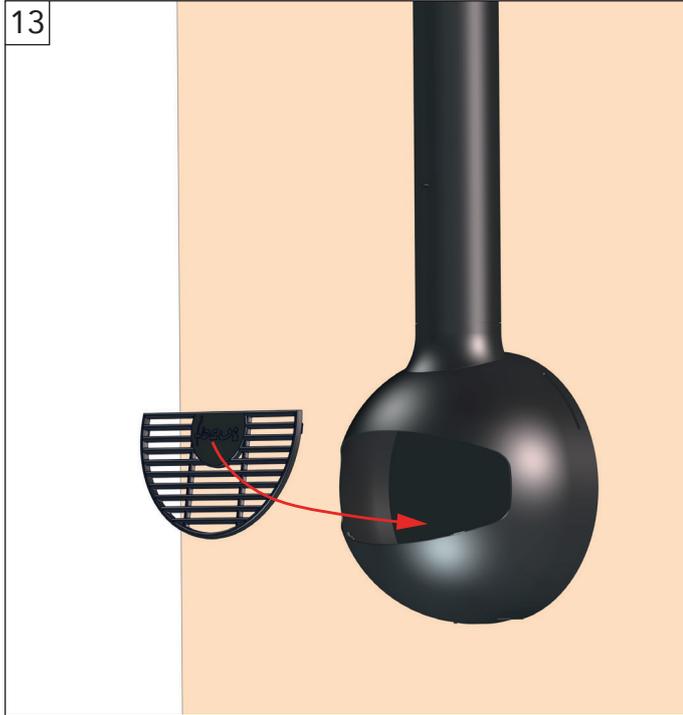

USE

WARNING :

DURING OPERATION, THE FIREPLACE EMITS HEAT. SURFACES CAN BECOME VERY HOT. KEEP CHILDREN, VULNERABLE INDIVIDUALS, CURTAINS, PETS, AND OTHER ITEMS AT A SAFE DISTANCE. ANY CONTACT MAY RESULT IN SEVERE BURNS.

■ **HANDLING FLAMMABLE PRODUCTS**

WARNING :

DO NOT USE CHEMICALS OR LIQUIDS TO LIGHT YOUR FIRE.

Do not use fuels such as lamp oil, various types of gasoline, kerosene, lighter fluid, or any other liquids to light or rekindle the fire. Ensure that these liquids are kept away from the fireplace.

■ **GRATE**

The cast iron grate is located inside the fireplace and should only be removed during cleaning, once the ashes have completely cooled.

■ **ASHES**

Ashes must be placed in a metal container with a tight-fitting lid. The closed container should be placed on a non-combustible surface, away from any flammable materials, until disposal. If the ashes are to be buried or dispersed, they must remain in the closed container until they are completely cooled.

■ **FUEL**

WARNING :

DO NOT BURN TRASH OR FLAMMABLE LIQUIDS SUCH AS GASOLINE, NAPHTHA, OR MOTOR OIL. DO NOT STORE FIREWOOD IN THE FIRE CLEARANCE ZONE AROUND THE FIREPLACE.

THIS FIREPLACE IS NOT DESIGNED TO BE USED WITH A DOOR. TO REDUCE THE RISK OF FIRE-RELATED INJURY, DO NOT INSTALL A DOOR ON THIS APPLIANCE.




Burn only natural, dry, log wood. The wood's moisture content should not exceed 20%. We recommend using dry wood that has been stored for 2 years. Use a covered shelter to store your wood.

USE

■ SPARK GUARD

⚠ WARNING :

GLOVES MUST BE WORN WHEN HANDLING THE SPARK GUARD.

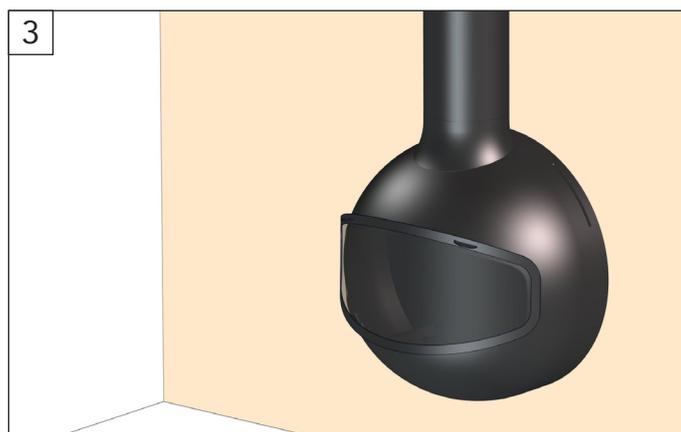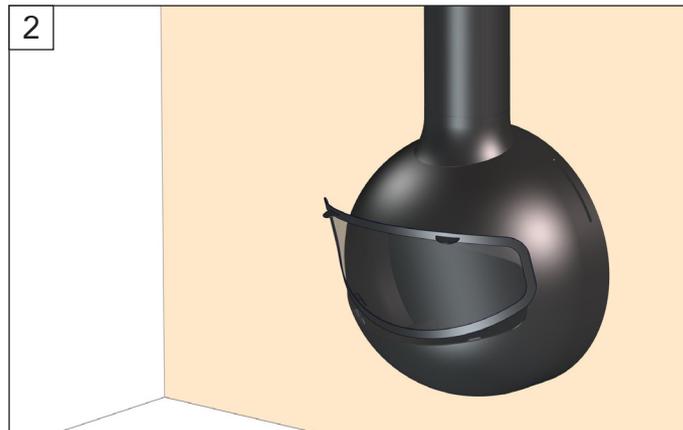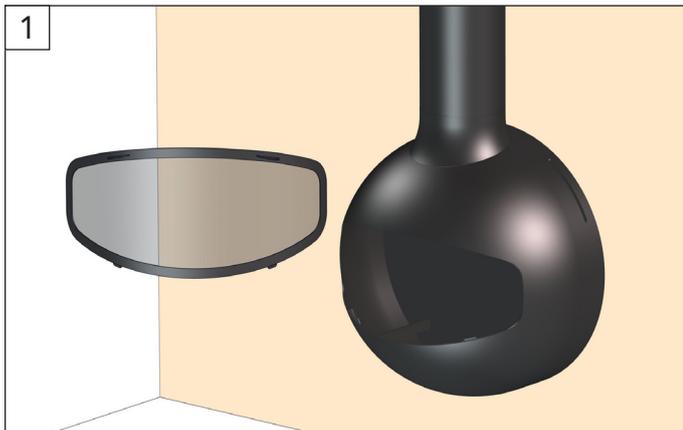

USE

■ BEFORE YOUR FIRST FIRE

- Clean any dust accumulated during transport or installation using a damp sponge and/or a dry cloth.
- If you notice scratches on painted models, use only the Focus touch-up spray paint provided. If using the spray paint, ventilate the room before lighting your fire to disperse any fumes generated during the paint curing process.
- The first fire should be light. Do not use packing materials or pallet wood as fuel.
- The paint we use is thermoplastic, baked at 250°C (482°F) for 30 minutes. Due to the gradual curing of the components, the fireplace may emit slight smoke during the first fires. Painted surfaces near the fire may temporarily become slightly sticky or tacky when hot.

In such cases, we recommend:

- Not to worry about any residual smoke or odors. This is normal during the first few fires and will quickly subside.
- Avoid touching, rubbing, or attempting to clean the fireplace while it is still hot. To prevent thermal shock, we strongly advise against pouring water on a vigorous fire to extinguish it.

■ LIGHTING AND MAINTAINING YOUR FIRE

WARNING :

DO NOT LIGHT A FIRE WITH THE ASH TRAP OPEN, AS THIS COULD CAUSE OVERHEATING OR A FIRE. DAMAGES CAUSED BY FAILURE TO COMPLY WITH THIS WARNING ARE NOT COVERED BY THE FOCUS WARRANTY.

DO NOT OVERLOAD YOUR FOCUS FIREPLACE TO PREVENT OVERHEATING.

To light the fire, we recommend using a small amount of fire starter along with sufficient kindling (small logs, branches, etc.) to create an initial light fire.

Ensure the damper is fully open. Once the light fire is burning steadily, add larger logs (between 3 and 7 depending on their size), ensuring not to smother the fire.

Leave some gaps between the logs to allow airflow. Adjust the position of the damper to avoid smoke back-flow.

To maintain or sustain your fire, add logs as necessary (refer to the note below).

NOTE : 3 kg of wood split into 10 small logs will burn more intensely (and faster) than 3 kg of wood split into 3 larger logs. However, both will ultimately produce the same amount of heat. The size of the logs you add determines the intensity and duration of the fire.

USE

■ PROTECTIVE GLOVES

The use of the Focus protective gloves provided with our models is required when handling the damper, the spark guard, and other components.

■ OPERATION AND USE OF THE DAMPER

The use of the cold hand tool or protective gloves is mandatory when handling the damper to avoid burns.

The Emifocus damper has 4 positions :

- When the handle is vertical, the shutter is 0%.
- When the handle is horizontal, the shutter is 75%.
- The two intermediate positions allow adjustments between 0% and 75%.


To change the position of the damper, first pull the handle toward you, then turn it, and push it back to lock it into one of the predefined positions.

⚠ WARNING :

NEVER ADJUST THE DAMPER TO AN INTERMEDIATE POSITION. THE DAMPER POSITION MUST BE ADAPTED TO THE INTENSITY OF THE FIRE. DURING IGNITION, IT SHOULD BE FULLY OPEN. IT SHOULD THEN BE ADJUSTED TO REDUCE THE SMOKE FLOW, ENSURING OPTIMAL THERMAL EFFICIENCY.

IF THE FIREPLACE BACK DRAFTS, THIS INDICATES THAT THE DAMPER IS OBSTRUCTING THE CHIMNEY TOO MUCH: REOPEN THE DAMPER AT THE FIRST SIGNS OF BACK DRAFTING.

■ OPERATION AND USE OF THE FRESH AIR INTAKE

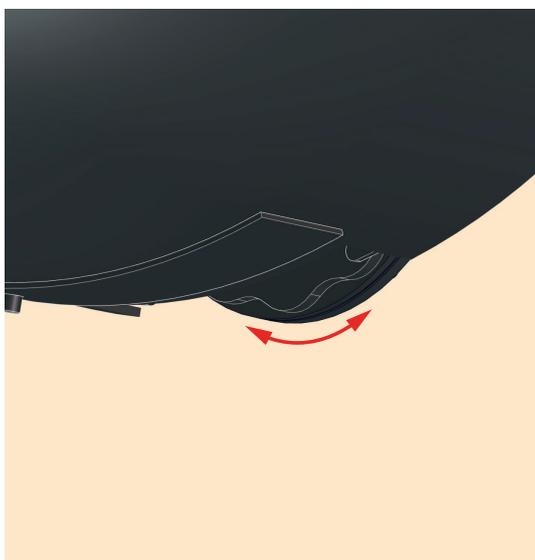

NOTE :

To adjust the fresh air intake, tighten or loosen the disc located under the fireplace.

⚠ WARNING :

THE AIR INTAKE MUST ALWAYS BE OPEN WHEN USING THE APPLIANCE.

MAINTENANCE


■ ASH REMOVAL

WARNING :

ENSURE THE FIRE IS EXTINGUISHED AND THE FIREPLACE SURFACES ARE COMPLETELY COOL BEFORE PROCEEDING WITH ASH REMOVAL.

The ash trap is located beneath the fireplace grate. Access it by crouching under the fireplace.

Open the trap by turning the handle. After removing the ashes, ensure the trap is properly closed again.

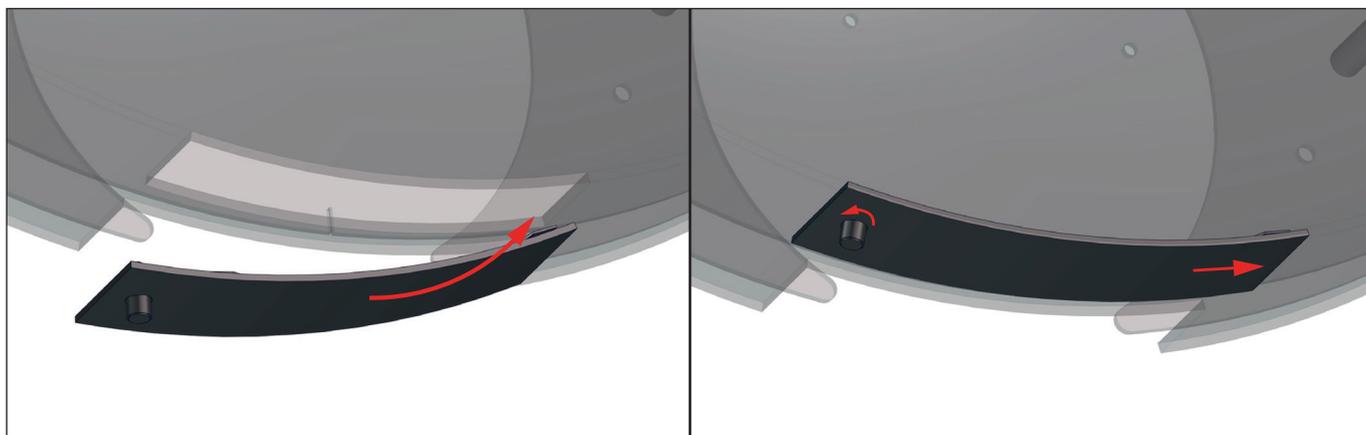

■ CREOSOTE FORMATION

When wood burns slowly, it produces tar and other organic vapors that combine with expelled moisture to form creosote. These creosote vapors condense in the relatively cool chimney of a slow-burning fire. As a result, creosote residues accumulate on the chimney walls. If ignited, this creosote produces an extremely hot fire.

Therefore, the chimney and chimney connector must be **inspected at least once every two months during the heating season** to determine if creosote has accumulated. If a significant layer of creosote (3 mm or more) has built up, it must be removed to reduce the risk of a chimney fire.

■ CHIMNEY SWEEPING

The Focus steel flue, stainless steel chimney, and single-wall connector must always be cleaned using a nylon brush. Never use a metal brush! Damage resulting from non-compliance with this instruction is not covered by the Focus warranty.

WARNING :

CHEMICAL CHIMNEY SWEEPING IS PROHIBITED. ONLY MECHANICAL SWEEPING IS ALLOWED.

MAINTENANCE

■ SURFACE CLEANING

The exterior surfaces can be cleaned with a soft, dry cloth or a damp sponge (ensuring the fireplace is cool).




WARNING :

DO NOT SCRAPE THE PAINT.

■ SPARE PARTS

Note : In the event of a part replacement, use only parts recommended by Focus. Failure to comply with this note will automatically void the warranty.

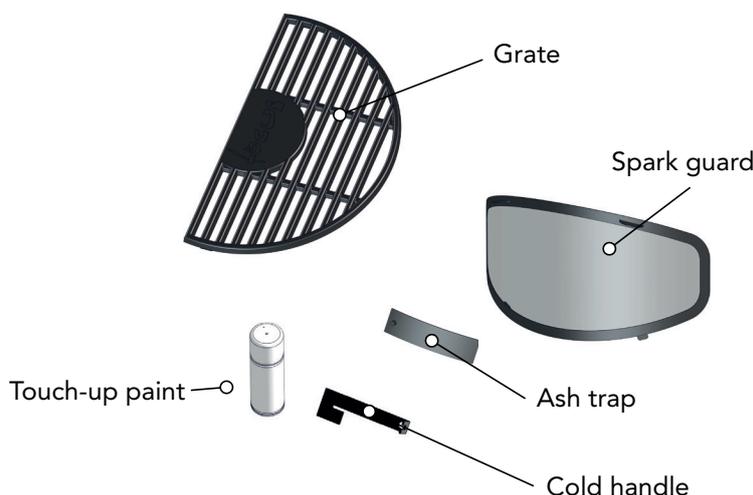

To order these parts, contact :



Colombus Design Corp.
10000 W. Washington Blvd, Floor 6
Culver City, CA 90032, USA
T: +1 (781) 333+4443
info@focus-fireplaces.us


WARRANTY

All our Focus models are guaranteed against any defects in design, construction, and manufacturing, and are guaranteed to function properly for 5 years from the date of purchase. The warranty for our products is only applicable when our fireplaces have been installed in compliance with all local building regulations and with strict attention to the technical details described in our design plans, installation manuals, maintenance manuals, and user manuals. Our warranties exclude accidental damage, such as those occurring during transport without written notification upon receipt (reservations), damage caused during installation, and damage resulting from improper use. Exclusion of the warranty applies to the coating for appliances located less than 10 km from a saline environment.



APPENDIX

■ GAS ADAPTATION


BURNER COVER

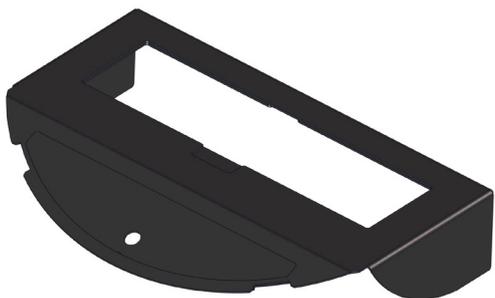

BURNER

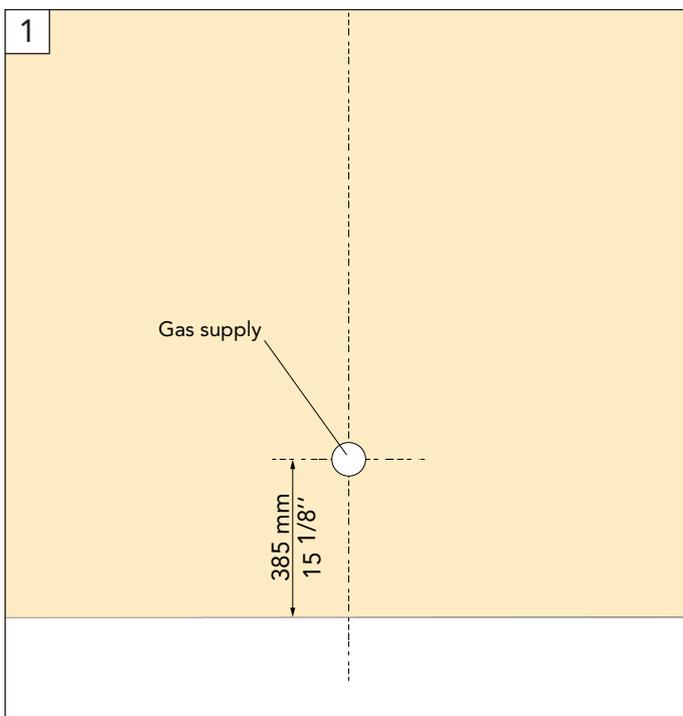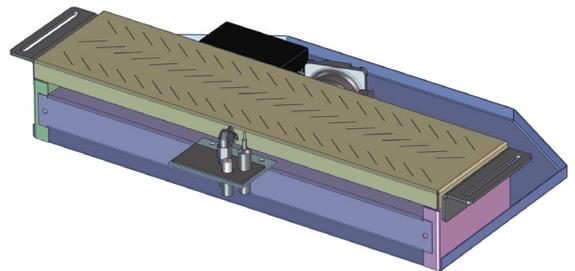

Position of the gas supply line on the wall.

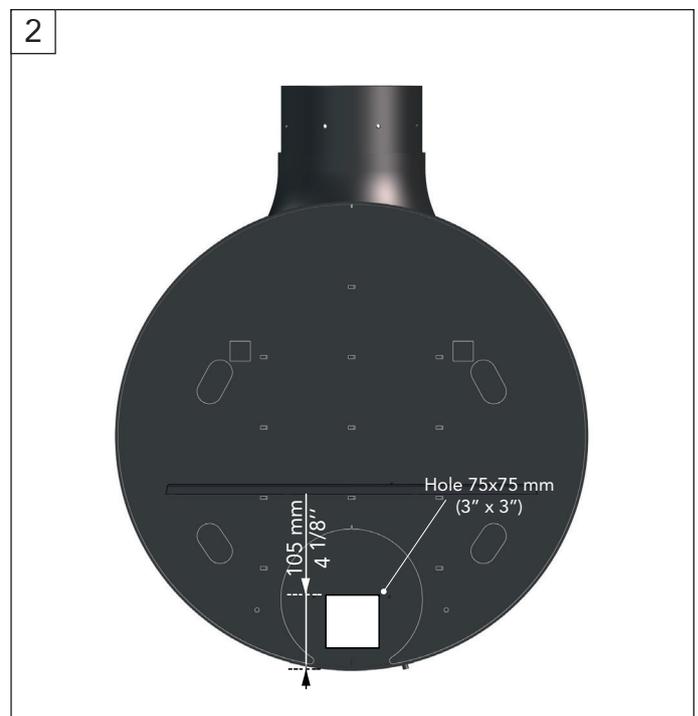

Drill a hole at the back of the Emifocus.

Then follow the steps on page 13 of the manual: 'European Home Gas Stones Natural Vent Manual'.



CREATE BEYOND CONVENTION

Focus – Atelier Dominique Imbert
3 impasse Claque Patin, Viols le fort, France
www.focus-creation.com
info@focus-creation.com