



Holo

FOCUS[®]

CREATE BEYOND CONVENTION

ERGOFOCUS

HOLOGRAPHIK[®]

User manual



CONTENTS

INTRODUCTION	04
SPECIFICATIONS	05
■ EXPLODED VIEW.....	05
USE	06
■ FOCUS APP.....	06
■ DEVICE IGNITION	07
■ NAVIGATING THE APP FEATURES.....	09
■ NAVIGATING THROUGH THE SETTINGS.....	10
■ OLFACTORY CARTRIDGE.....	12
■ SWITCHING OFF OR PUTTING THE DEVICE INTO STANDBY MODE.....	13
■ APPLIANCE MAINTENANCE.....	13
RECYCLING	14
WARRANTY	14
APPENDIX	15
■ TROUBLESHOOTING TABLE.....	15
■ REMOVE THE HEARTH GLASS.....	17
■ LOGS INSTALLATION.....	18
■ REINSTALLATION OF THE GLASS.....	20
■ NAMEPLATE.....	21

INTRODUCTION

IMPORTANT

Please read this manual in its entirety before using the appliance. Failure to follow the instructions in this manual may result in serious property damage and personal injury. Please keep this manual for future reference. Any modification to the appliance without prior approval from Focus is strictly prohibited.

Do not place any sources of heat or open flames (candles, heaters, etc.) near the appliance. Make sure the appliance cannot come into contact with water. Never touch the appliance with wet hands.

If smoke, an unusual smell, or a strange noise is emitted by the appliance: switch off the power at the circuit breaker.

Never attempt to carry out repairs yourself; contact a qualified professional.

In the event of a thunderstorm, storm, or lightning, switch off the power at the circuit breaker.

Do not use liquid or aerosol cleaners. Use a soft, dry cloth for cleaning.

Keep the product away from magnetic objects, motors, and transformers.

This product is supplied with an olfactory cartridge and this manual.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this product does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver.
3. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for assistance.

FCC ID: 2ABCB-RPI4B

SPECIFICATIONS

■ EXPLODED VIEW



○ — Monitor holder



○ — Monitor cover + Monitor plate + olfactory + Controller



○ — Hearth



○ — Monitor



○ — Holographic glass



○ — Molded resin embers



○ — Printed circuit board




○ — Base

USE

■ FOCUS APP

Your Ergofocus holographik® can be controlled via an application. To do so, start by downloading it onto your smartphone/tablet from the App Store or Google Play. Scan the corresponding QR code or search for "Plug&Fire".

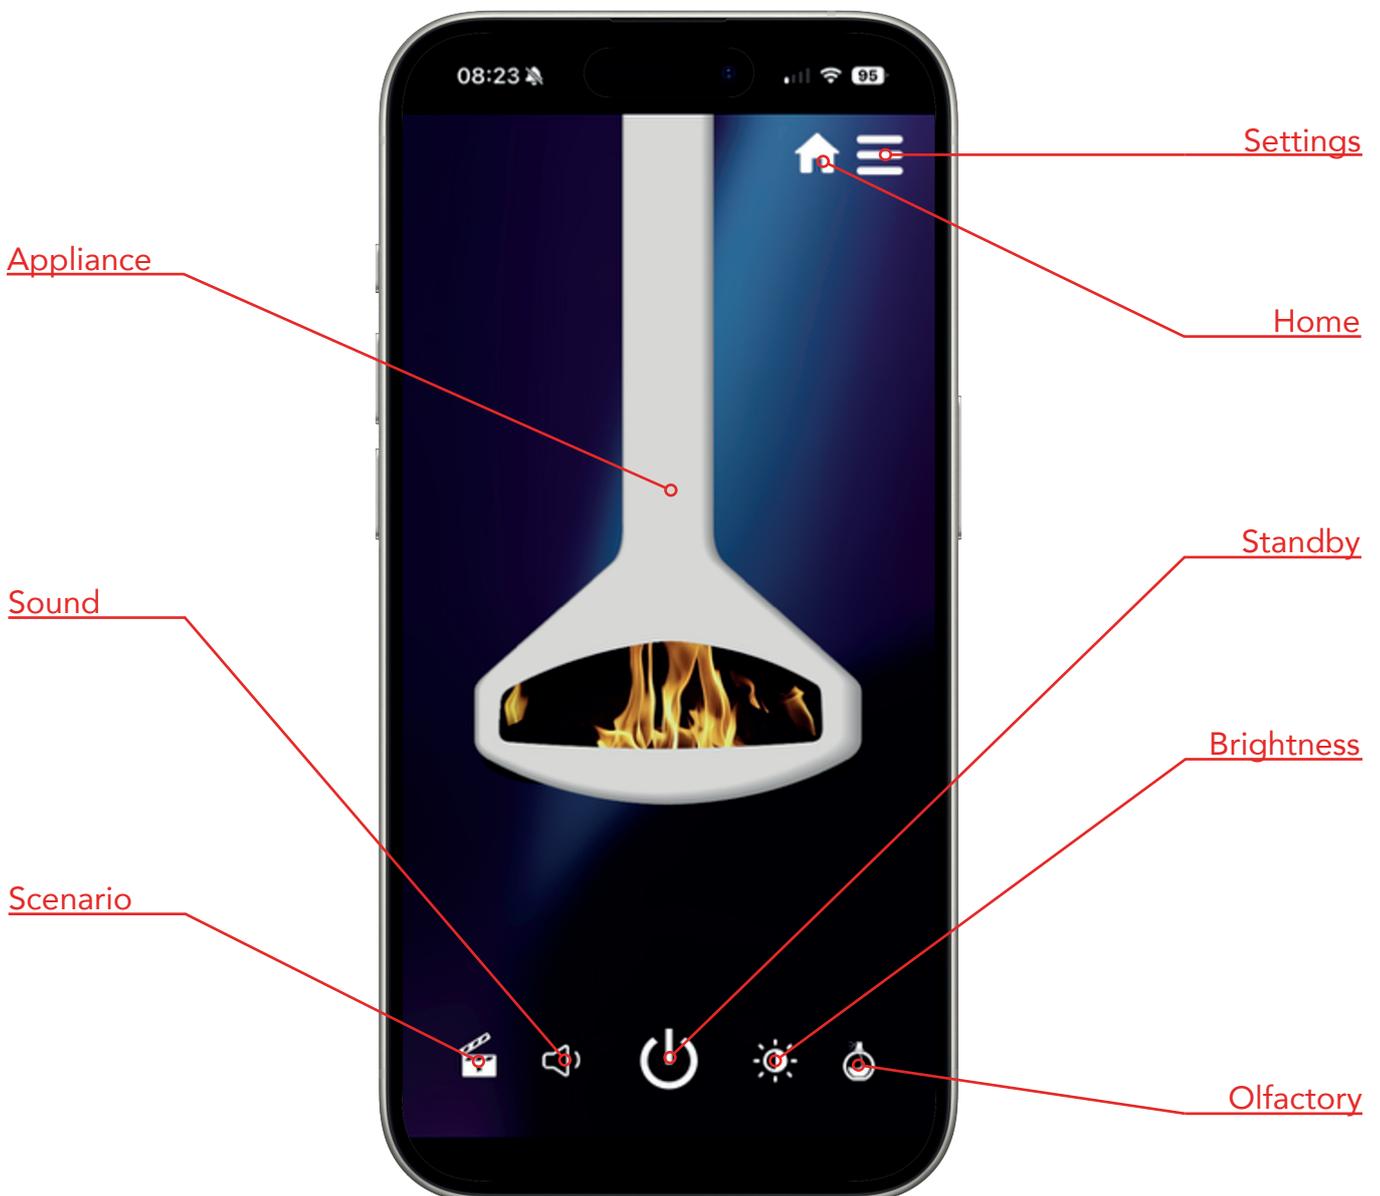

USE

■ DEVICE IGNITION

To turn on your device, use the main power button located on the base of the unit.



When turning on your device using the main power button, wait approximately 2 minutes for the device to initialize. The appliance is operational once the scenario has started in your device. Then follow the steps shown below.



Initialization monitor




Device operational


USE

WARNING

If your device is connected to your Wi-Fi network, skip steps 1 and 2. If you only have one device, skip steps 4 and 5.

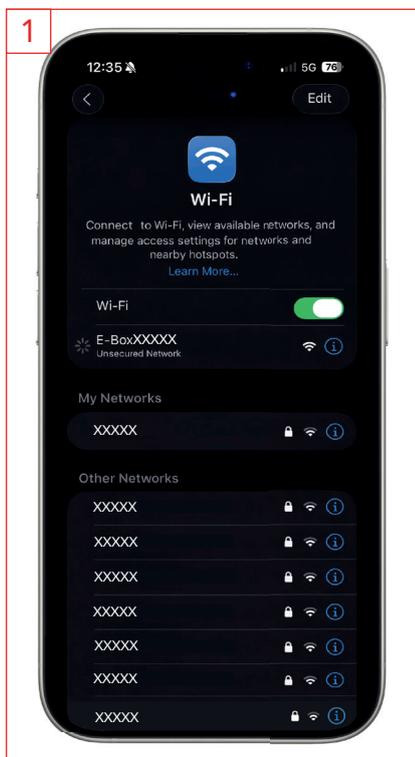

When the device is operational, go to your Wi-Fi settings and select your device.

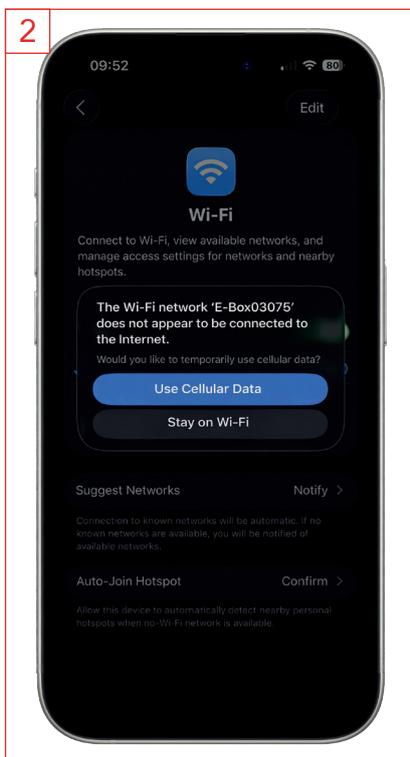


Select "Stay on Wi-Fi".



Open your "FOCUS" app and wait while the data loads.



If you have multiple devices, select the one you wish to control.

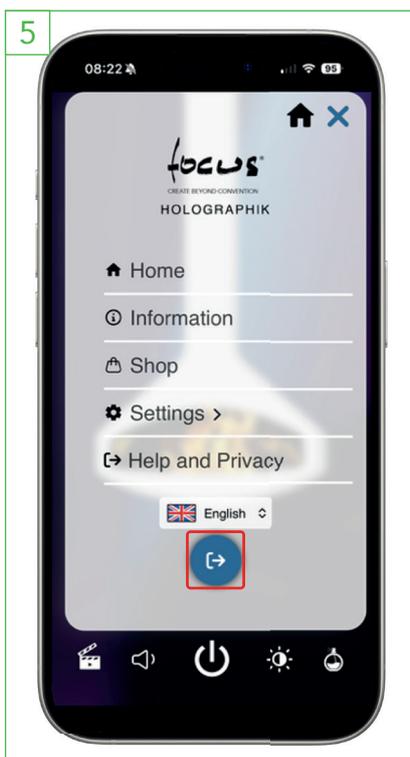

Click the exit button to return to the menu.



Your hearth with the video animation appears.

USE

■ NAVIGATING THE APP FEATURES

SCENARIO



Scenario selection.

SOUND



Volume adjustment.

BRIGHTNESS



Brightness adjustment.


OLFACTORY




Olfactory setting & remaining percentage.

USE


■ NAVIGATING THROUGH THE SETTINGS

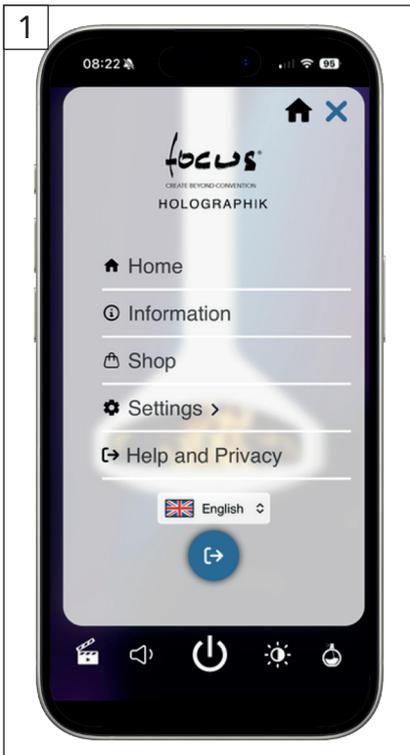

The three small lines at the top right allow you to enter the settings menu.

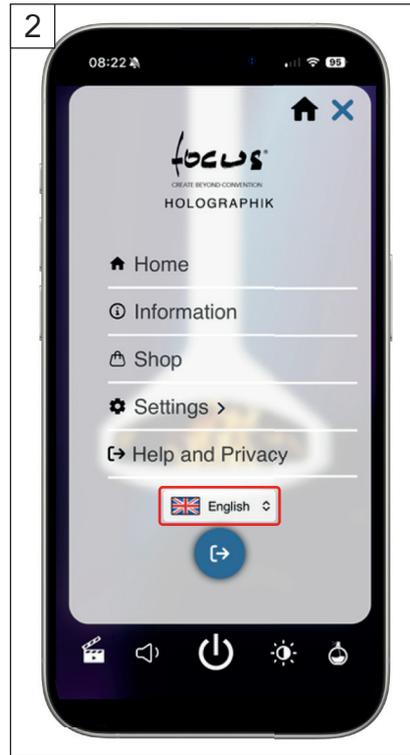



In "English", you can choose the language.

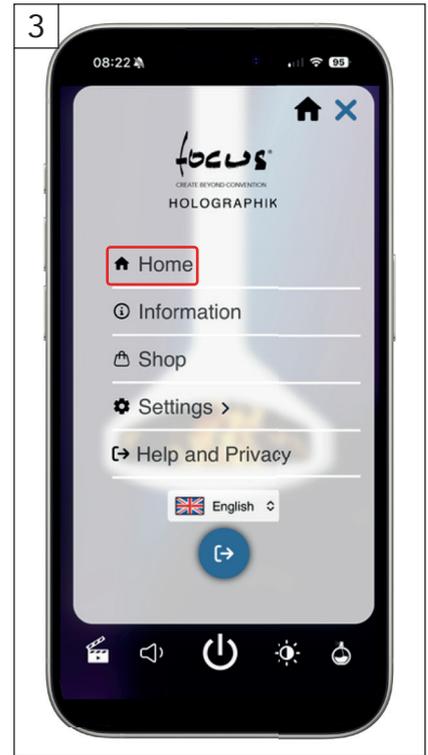


"Home" allows you to return to the main screen.




"Information" displays the data shown on the next two thumbnails.

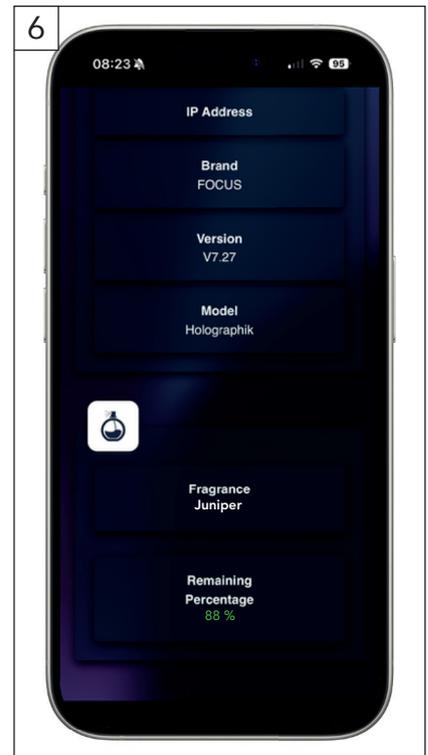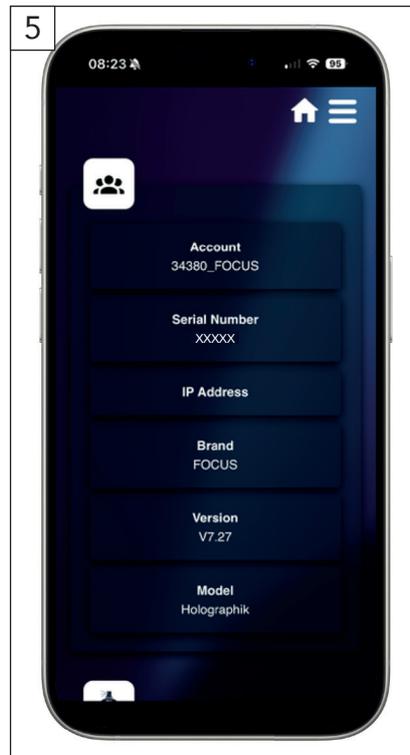


USE

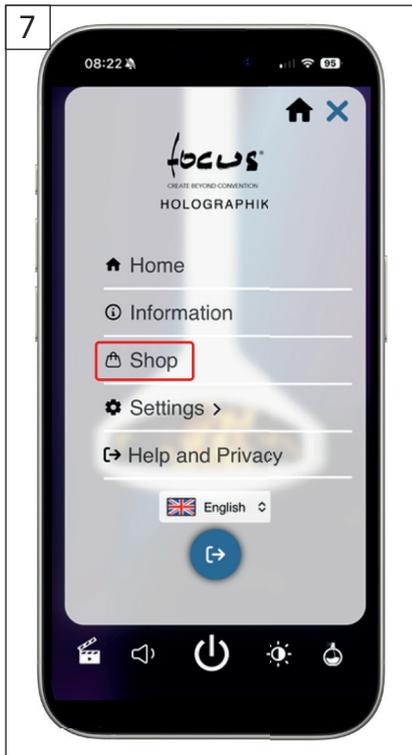

The "Shop" tab redirects you to our online store.

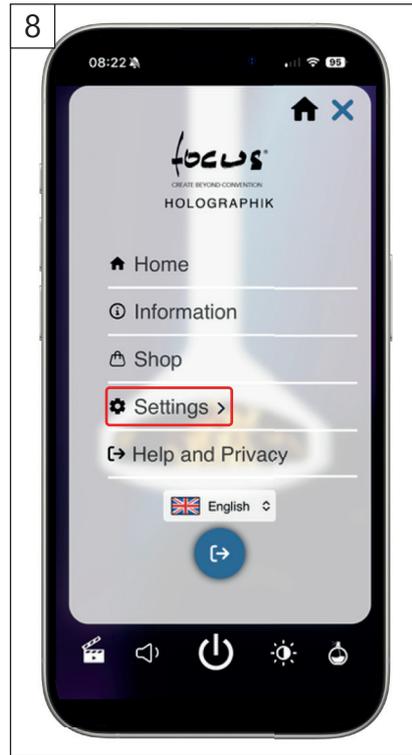


In "Settings", you can access the following three parameters.

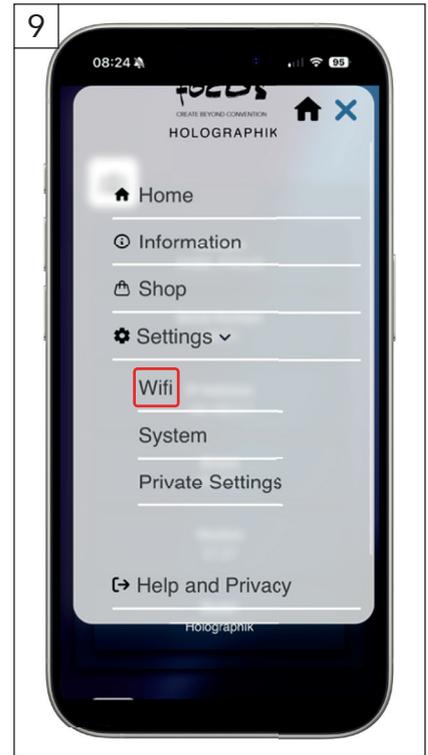


1: The "WiFi" tab displays the following data.



Enter your Wi-Fi if needed.

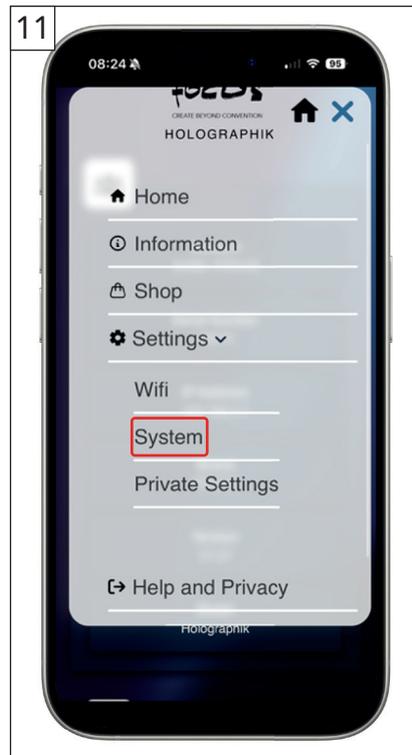


2: The "System" tab gives you access to the following four items.

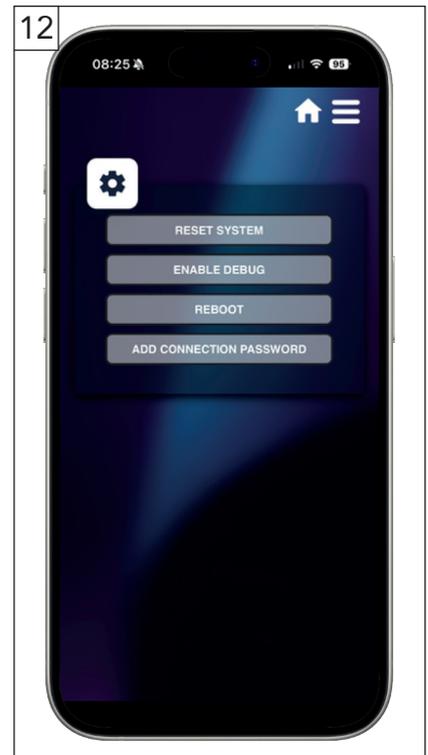


 To be used only with Focus approval.

USE

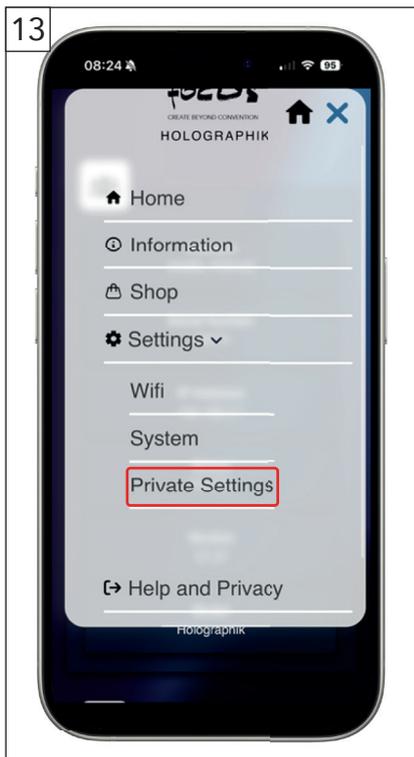


3: The "Private Settings" tab cannot be used by you.

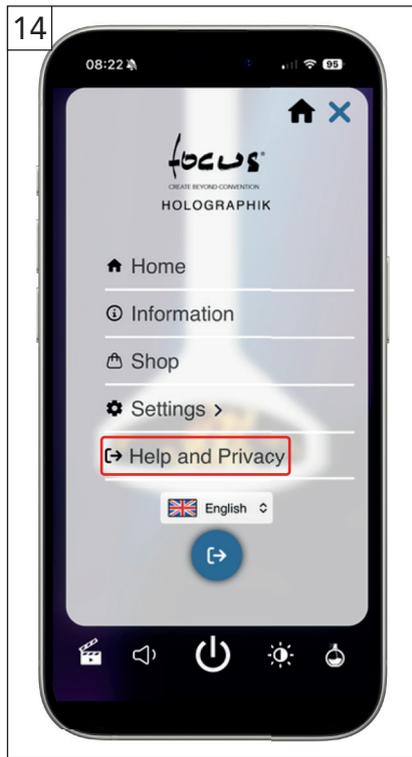


"Help and Privacy" can help you resolve certain issues.

■ OLFACTORY CARTRIDGE

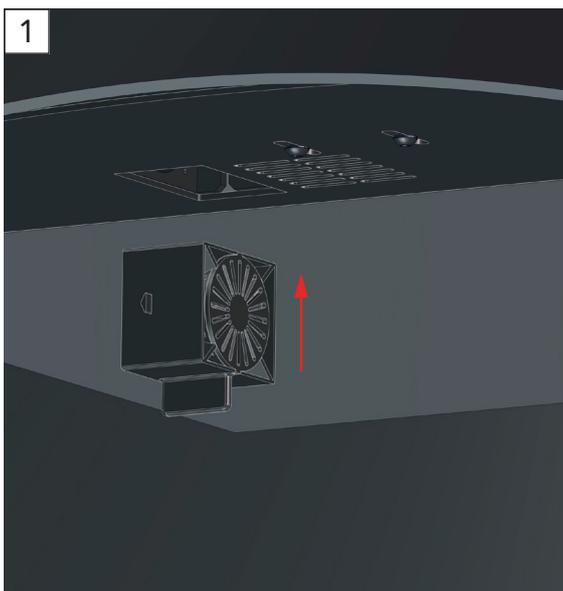

Place the cartridge in its slot (screen cover) until you feel it click into place.

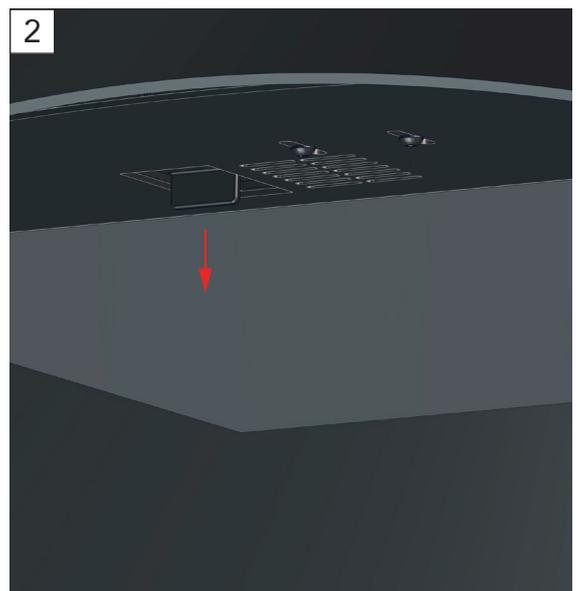

To remove it, pull the cartridge downward.

USE

■ SWITCHING OFF OR PUTTING THE DEVICE INTO STANDBY MODE

SWITCHING OFF:

To switch off your device, use the main power button located on the base of the unit.



STANDBY :

To put your device into standby mode, use the central button on your application.



■ APPLIANCE MAINTENANCE

Make sure the appliance is in the "O" (OFF) position.

Carefully remove the glass (see p.17). Wipe the monitor with a soft, dry cloth. Do the same for the glass.

If the surface is very dirty, you may use a soft cloth very slightly dampened with water.

Then wipe again with a soft, dry cloth.

WARNING

Never use alcohol, benzene, solvent, or any other chemical products.
Do not use compressed air to remove dust.

Paint touch-ups will likely be required during the product's lifetime. Touch-ups must be carried out exclusively with the Focus-brand touch-up spray supplied with the appliance.

RECYCLING



This logo affixed to the product indicates that it is a device whose waste treatment falls under European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). This directive requires that used household appliances be collected separately in order to optimize the recovery and recycling rate of the materials they contain, and to reduce the impact on the environment and human health.

Therefore, at the end of this appliance's life, it must not be disposed of with unsorted municipal waste. It must be taken to the collection and recovery systems made available by local authorities (waste collection centers) and distributors.

WARRANTY

All our Focus models are guaranteed against any defects in design, construction, and manufacturing, and are guaranteed to operate correctly for 2 years from the date of order. The warranty for our products is valid only when our hearths have been installed in compliance with all local building regulations and with strict attention to the technical details described in our technical drawings, installation manuals, maintenance manuals, and user manuals.

Our warranties exclude accidental damage, such as damage occurring during transport without written notification upon receipt (reservations), damage caused during installation, and damage resulting from improper use. Warranty exclusion applies to the coating for appliances located less than 10 km from a saline environment.

APPENDIX

■ TROUBLESHOOTING TABLE


ENCOUNTERED ISSUE	POSSIBLE CAUSE	SOLUTION
 <p>This monitor has been looping for several minutes.</p>	<ul style="list-style-type: none"> • The application was launched too quickly toward the device. • You are too far from your device. 	<ul style="list-style-type: none"> • Close the application and wait for the scenario to appear in your hearth. • Move closer to the device.
	<ul style="list-style-type: none"> • No device detected. 	<ul style="list-style-type: none"> • In offline mode: If your device is not connected to the internet, make sure you have followed the instructions indicated on p.8. • Switch everything off and repeat the steps starting from p.7. • In online mode: If your device is connected to your Wi-Fi network, make sure your phone is also connected to the same Wi-Fi.
 <p>The olfactory function is not responding in the application.</p>	<ul style="list-style-type: none"> • No olfactory cartridge present. • The cartridge detection chip has been damaged. • You have just inserted it. 	<ul style="list-style-type: none"> • Insert an olfactory cartridge. • Replace the olfactory cartridge. • Close the application, reopen it, and activate the olfactory function.

APPENDIX


ENCOUNTERED ISSUE	POSSIBLE CAUSE	SOLUTION
<ul style="list-style-type: none"> The olfactory system is making noise. 	<ul style="list-style-type: none"> Installation issue. 	<ul style="list-style-type: none"> Contact the installer.
<ul style="list-style-type: none"> The scenario does not start. The monitor remains stuck on the initialization footage (Embers). 	<ul style="list-style-type: none"> You have just turned on the device. 	<ul style="list-style-type: none"> Wait 2 minutes for the initialization to complete.
<ul style="list-style-type: none"> The LEDs on the base do not light up. 	<ul style="list-style-type: none"> Power or controller issue. 	<ul style="list-style-type: none"> Check in your application that the brightness is not set to minimum. Contact the installer.
<ul style="list-style-type: none"> The device produces no sound. 	<ul style="list-style-type: none"> Speaker or power issue. 	<ul style="list-style-type: none"> Check in your application that the sound is not set to minimum. Contact the installer.
<ul style="list-style-type: none"> The monitor appears to be in standby mode. 	<ul style="list-style-type: none"> Standby mode was activated during the last use. 	<ul style="list-style-type: none"> Open your application and press the central button.
<ul style="list-style-type: none"> Degraded image. 	<ul style="list-style-type: none"> Damaged HDMI cable. 	<ul style="list-style-type: none"> Contact the installer.
<ul style="list-style-type: none"> I cannot see all my devices. 	<ul style="list-style-type: none"> They are not all connected to Wi-Fi. They are connected to different Wi-Fi networks. One of the devices is turned off. 	<ul style="list-style-type: none"> Check the Wi-Fi settings in the application. Turn on all the devices.
<ul style="list-style-type: none"> Nothing turns on. 	<ul style="list-style-type: none"> General power issue. 	<ul style="list-style-type: none"> Check that the power button is set to 'I' (ON). Check the main circuit breaker. Contact the installer.

APPENDIX


■ REMOVE THE HEARTH GLASS

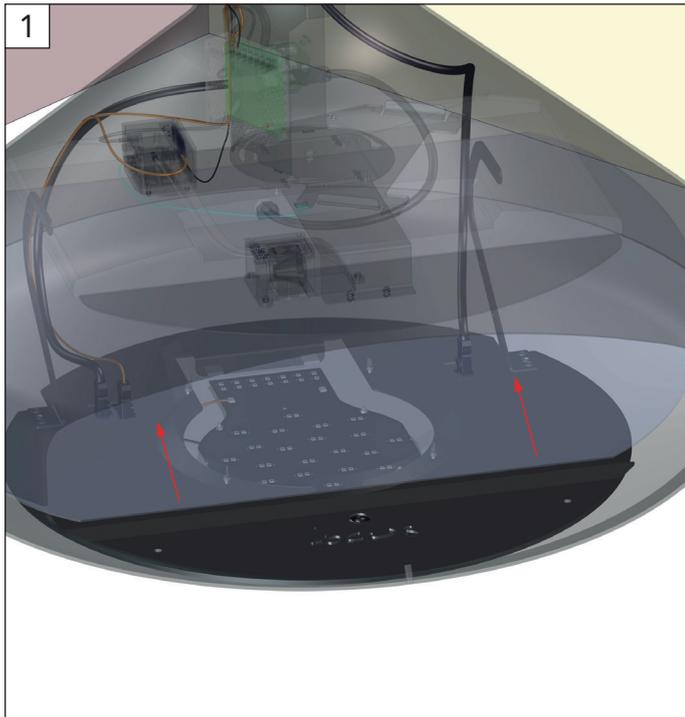

1 Place your hands on both sides of the glass and lift it slightly.

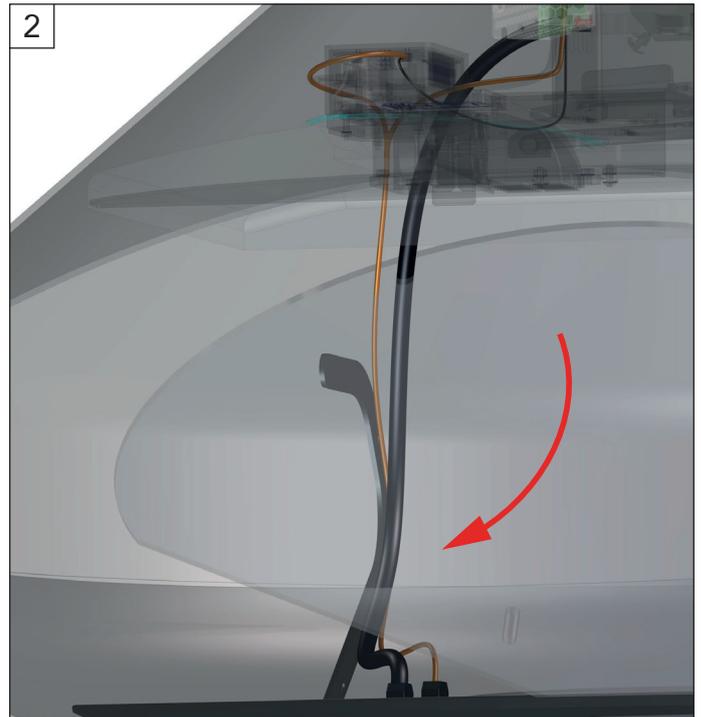

2 Rotate it while keeping one side resting on the support.

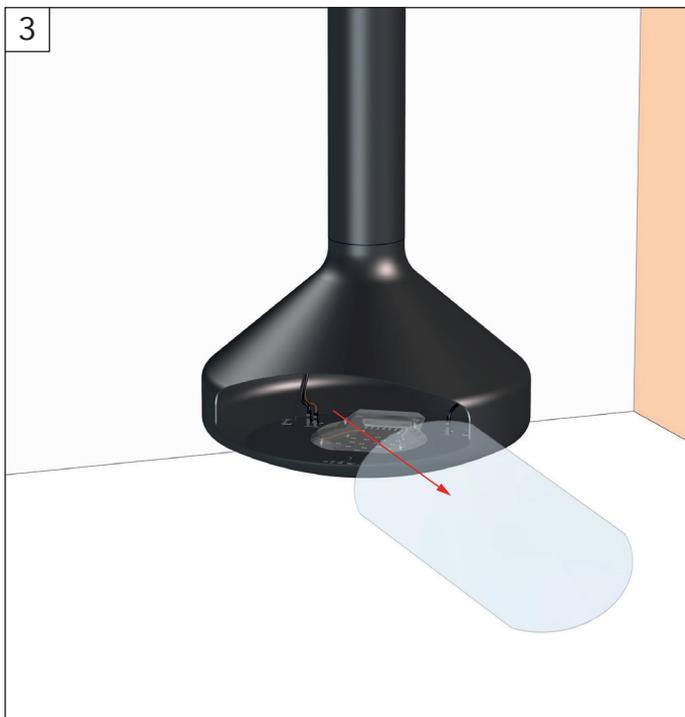

3 Then gently remove the glass from the hearth.

APPENDIX

■ LOGS INSTALLATION

Log 1



Log 2



Log 3



Log 4



Log 5



Log 6



Log 7






Vermiculite



Gray chips








APPENDIX

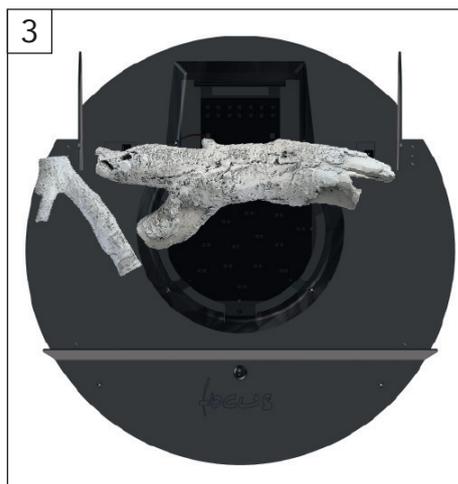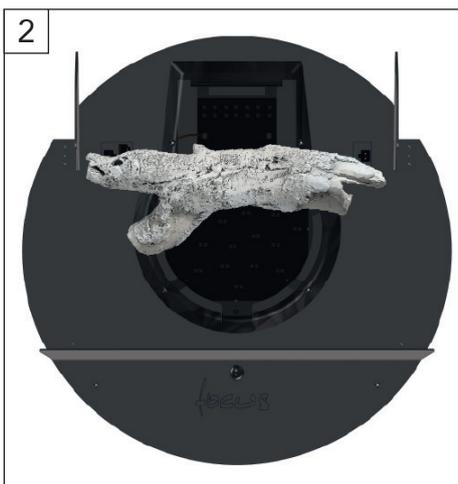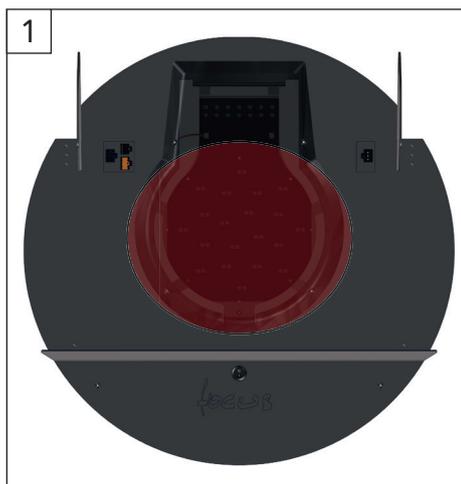


Place some vermiculite and grey chips in this area. Leave 2 cm free at the front, near the glass support.

Place the logs following the order shown on the previous page.

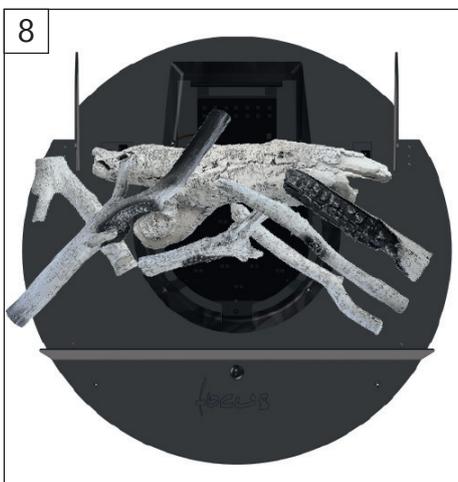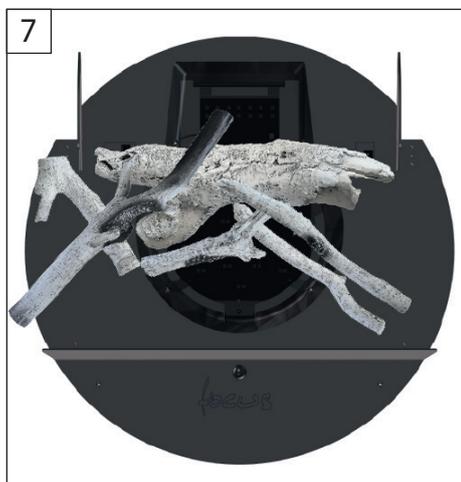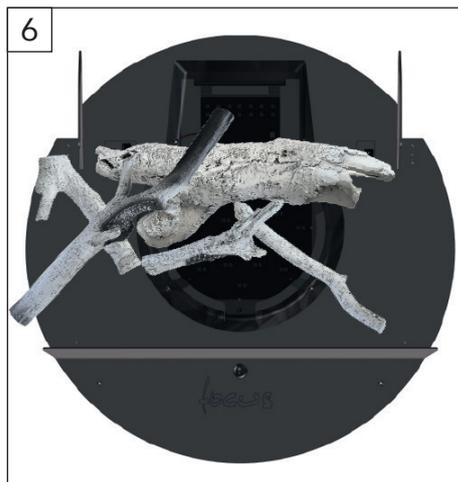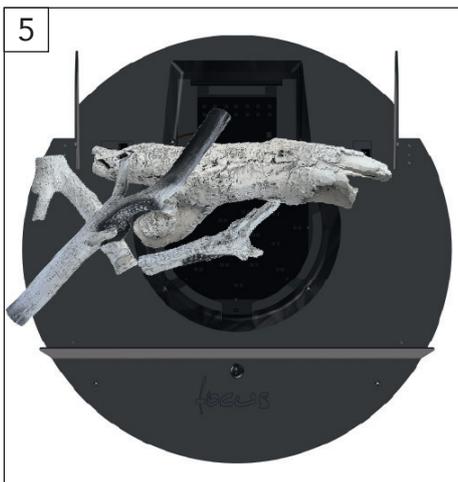
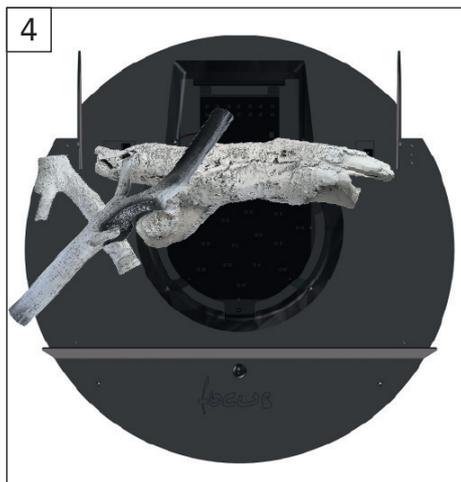


APPENDIX


■ REINSTALLATION OF THE GLASS

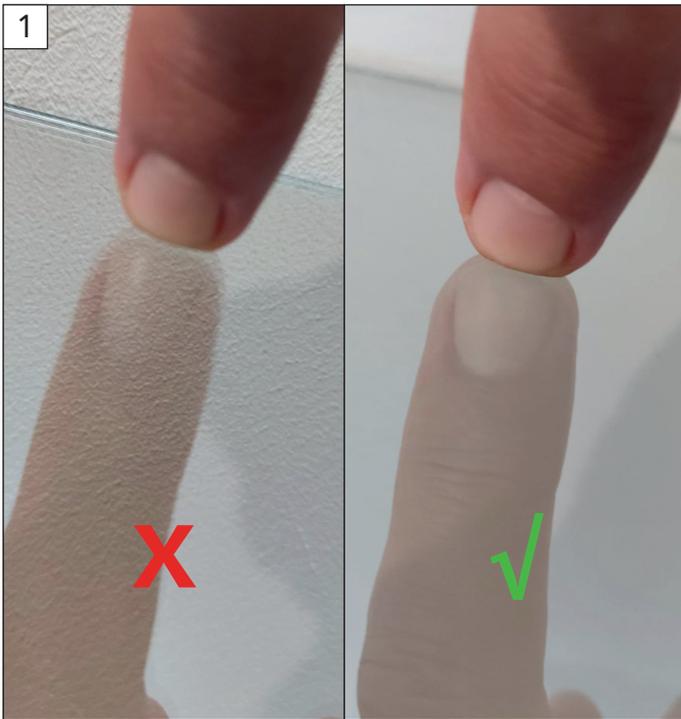

Identify the "mirror" side of the glass. The mirror side must be positioned facing upward.

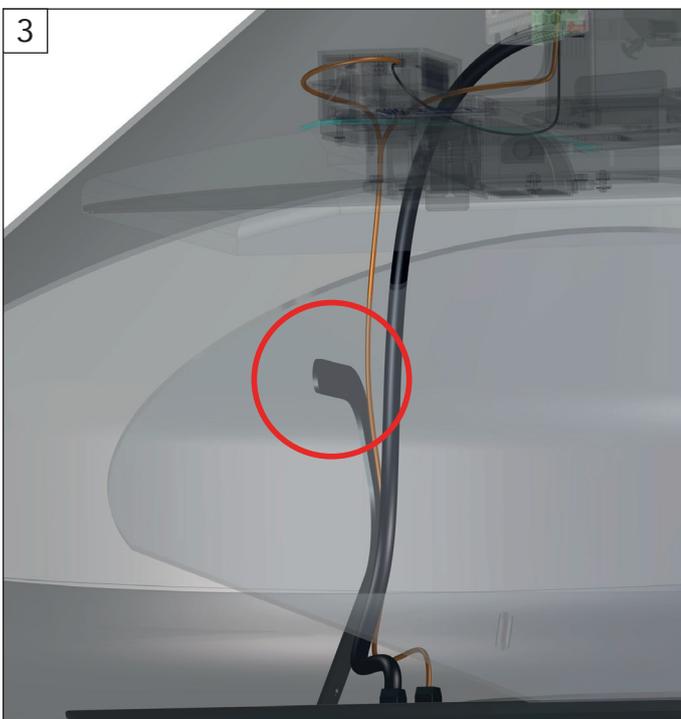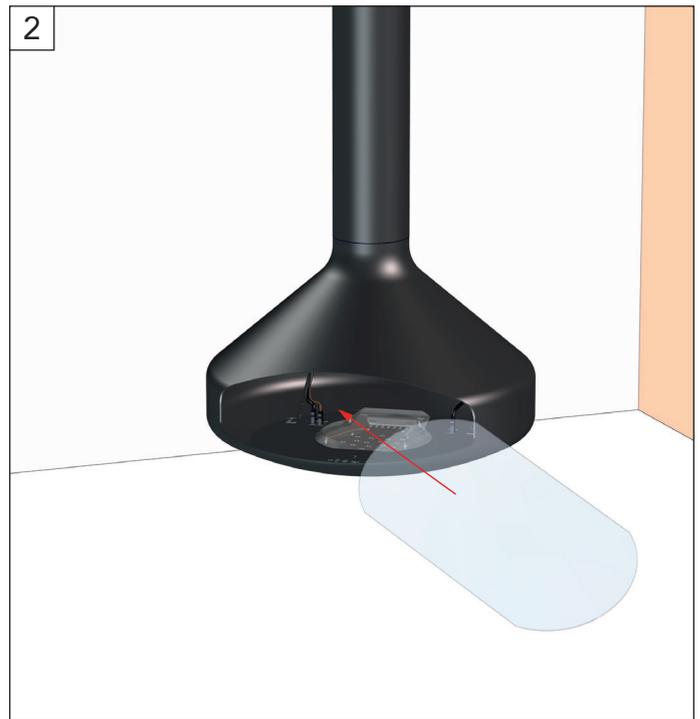


Place the glass on the left support.

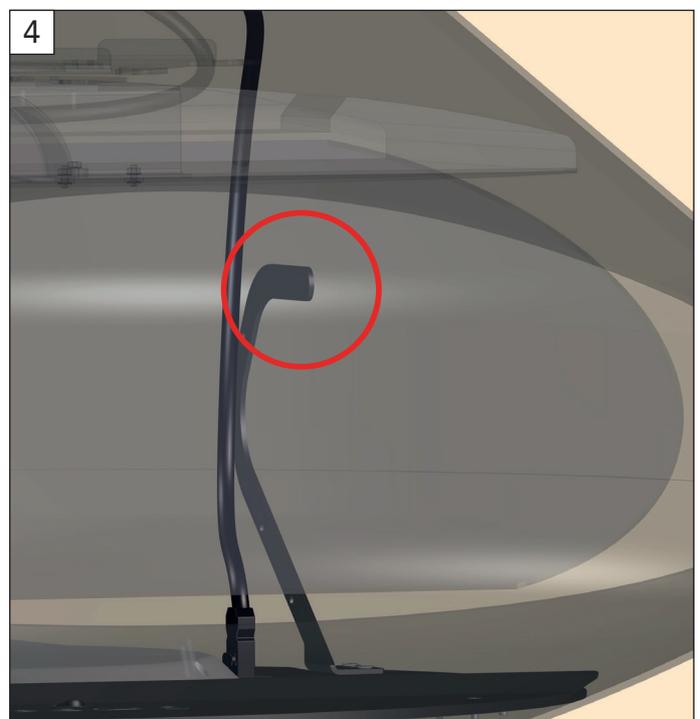

Then rotate it to position it onto the right support.

APPENDIX

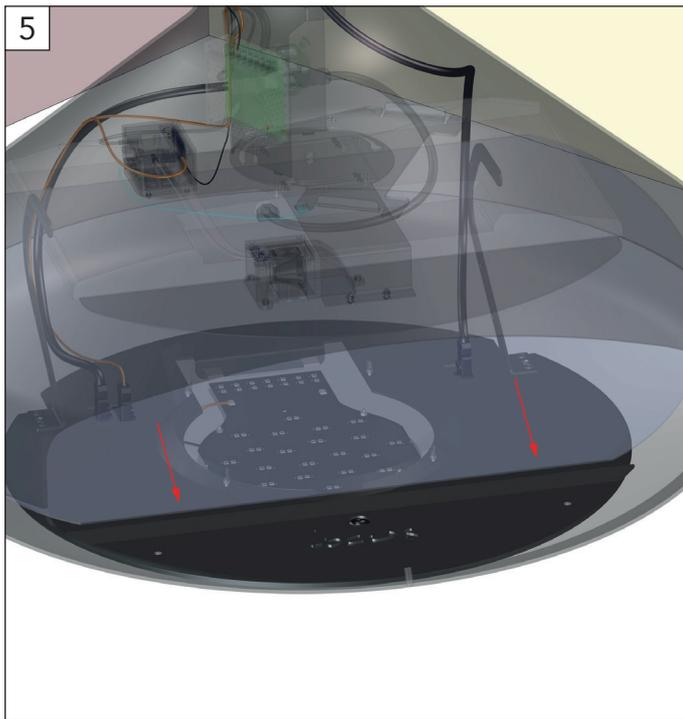

Place the bottom of the glass resting behind its support.

■ NAMEPLATE

 Focus - Atelier Dominique Imbert Impasse claqué patin, 34380 Viols le Fort - France	Model :	ERGOFOCUS HOLOGRAPHIK
	Input :	100-240V~ 50-60Hz
	Power :	100 W
	SN :	
		WARNING : Hazardous voltage inside Only authorized personnel may service this equipment
		   



CREATE BEYOND CONVENTION

Focus – Atelier Dominique Imbert
3 impasse Claque Patin, Viols le fort, France
www.focus-creation.com
info@focus-creation.com