






# Focus Adjustable Suspension Plate Cutting and Installation Instructions

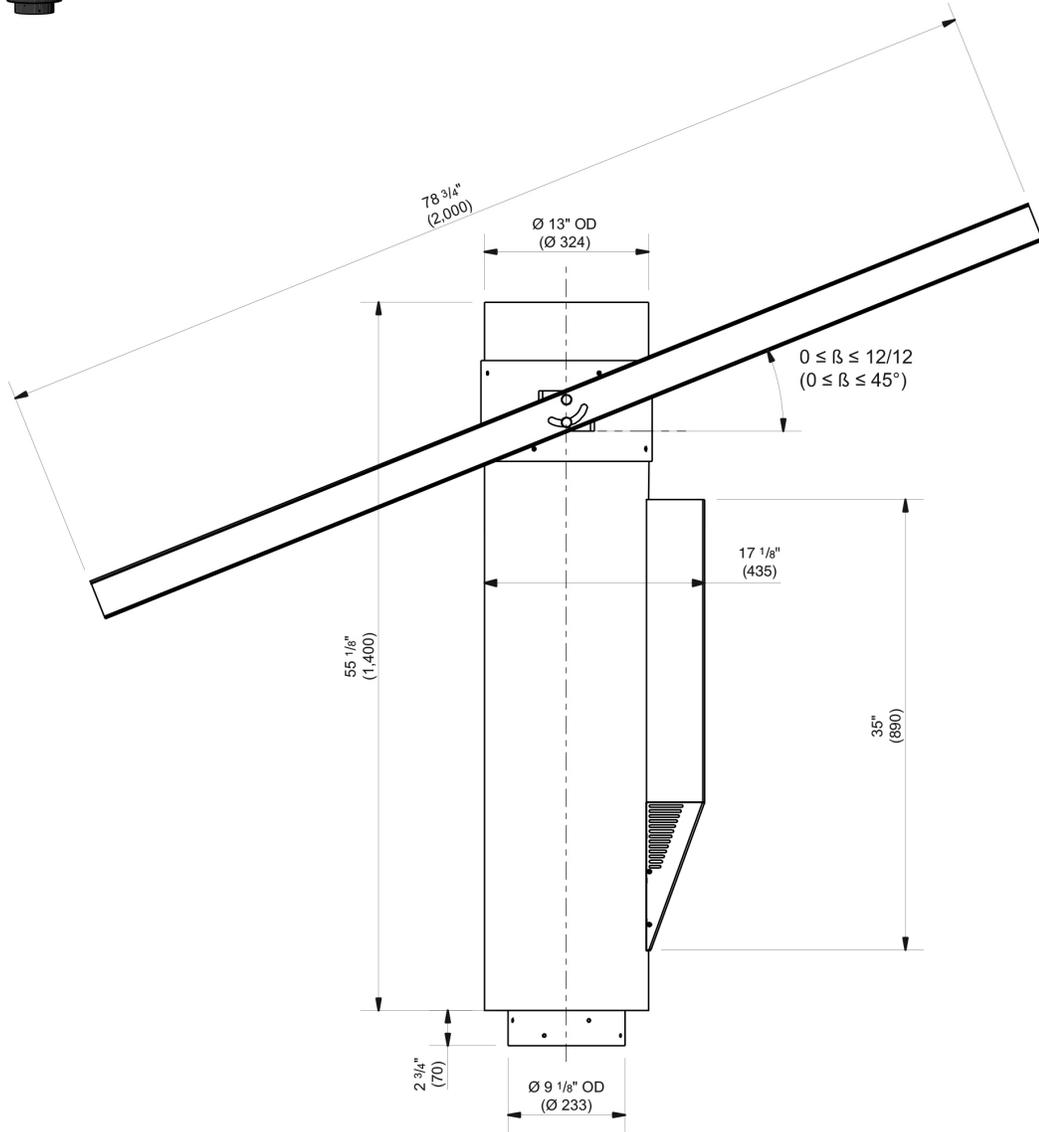

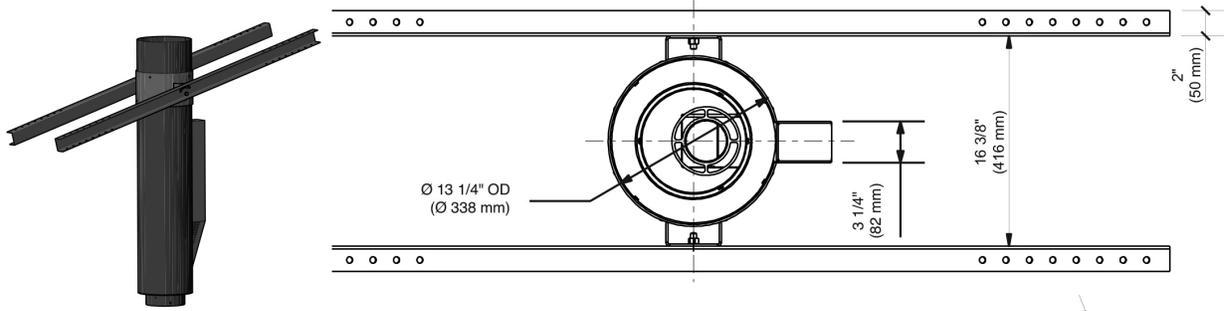

## Focus Adjustable Suspension Plate Cutting and Installation Instructions

Components:

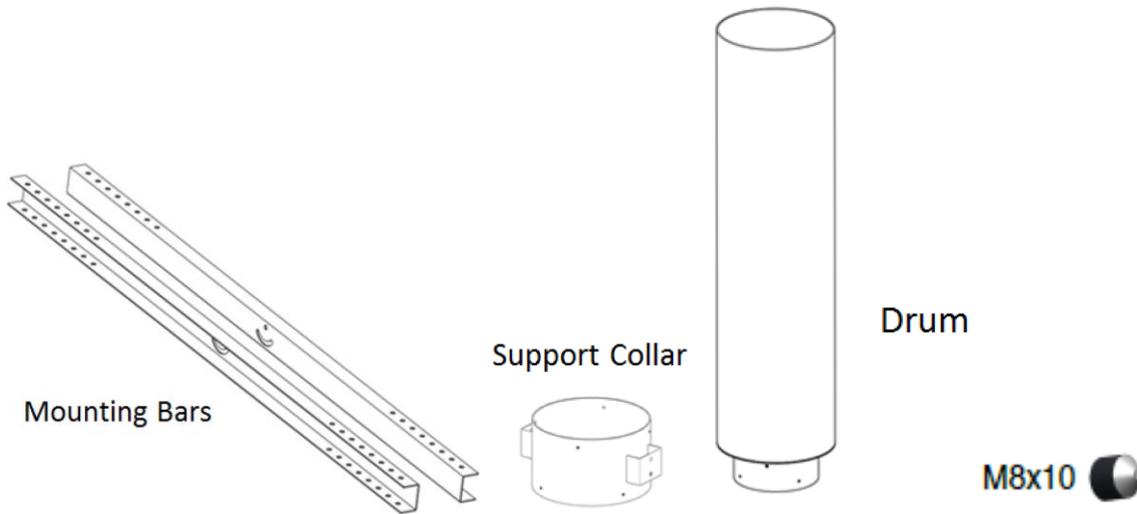

The steps of installation and cutting of the adjustable suspension plate are as follows:

- 1 - Place support collar between the mounting bars. Tighten bolts using supplied nuts and lock washers.
- 2 - Mount this assembly in the ceiling or roof.
3. Install the drum inside the support collar from below.
4. Adjust drum to desired length. The large portion of the drum must be a minimum 3" below ceiling finish.
5. If drum is to be cut, mark the drum above the support collar with a pencil using the support collar as a guide.
6. Remove the drum from the support collar and apply tape around pencil marks. Use as cutting guide.
7. Cut the drum with an angle grinder outfitted with cutting wheel following the tape.
8. Install the drum again into the support collar. Using a level, confirm and tighten firmly cramping screws following the pattern below.

Screw 1 – Install first x 3  
Screw 2 – Install next x 2  
Screw 3 – Install last x 3

**Note:** Screws are not designed to sit flush with support collar.



## Focus Adjustable Suspension Plate Cutting and Installation Instructions

